Operating Instructions

ProMinent® Sigma/ 2
S2Ba (Basic Type)
S2Ca (Control Type)

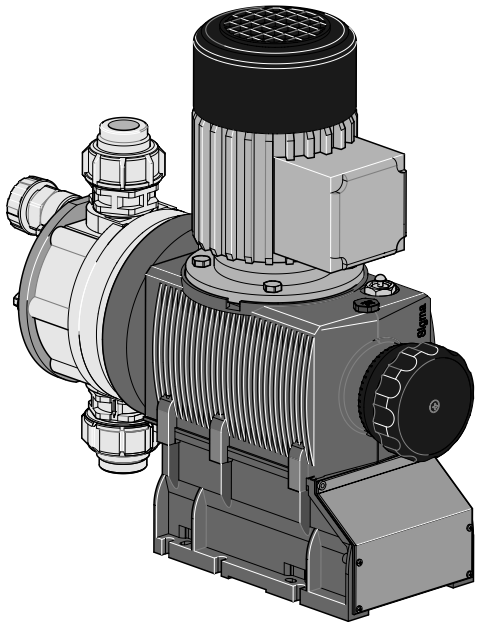

S2Ba

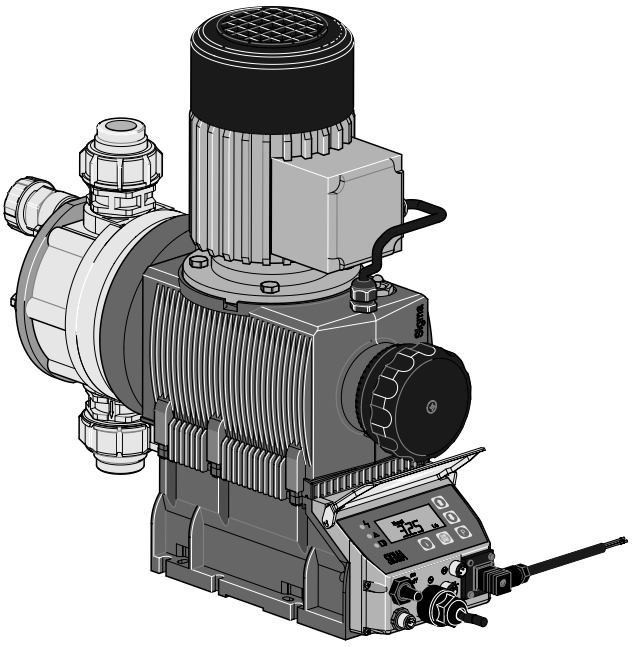

S2Ca

S2Ba ___ ___ ___ ___ ___ ___ ___ ___ ___ ___ ___ ___

S2Ca ___ ___ ___ ___ ___ ___ ___ ___ ___ ___ ___ ___ ___ ___ ___

Please enter the identity code of the device here.

Two sets of operating instructions are necessary to ensure the ProMinent® Sigma/ 2 S2Ba or S2Ca metering pumps are operated safely and reliably for their intended purpose:

This product specific Sigma/ 2 operating instructions manual and the "General operating instructions ProMinent® motor-driven metering pumps and hydraulic accessories" are only valid if read together!

Please completely read through these operating instructions first! · Do not discard!

The operator shall be liable for any damage caused by installation or operating errors!

Imprint

Operating Instructions for ProMinent® Sigma/ 2 S2Ba/S2Ca
Translation of the original operating manual
© ProMinent Dosiertechnik GmbH, 2002

ProMinent Dosiertechnik GmbH
Im Schuhmachergewann 5-11
69123 Heidelberg · Germany
info@prominent.com
www.prominent.com

Subject to technical modifications.

Control elements and key functions

Control elements: overview

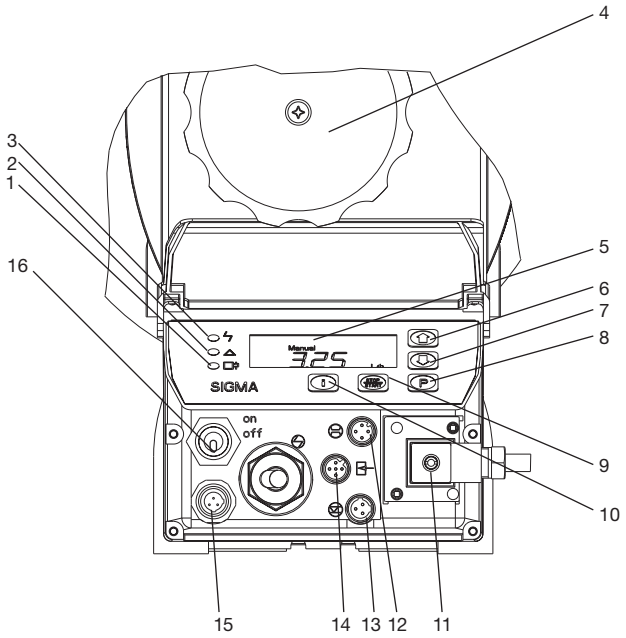

1 Operating light (green)
2 Warning light (yellow)
3 Error warning light (red)
4 Stroke length adjuster
5 LCD display
6 UP key
7 DOWN key
8 P key
9 STOP/START key
10 i key
11 Relay output (optional)
12 Metering monitor socket
13 Float switch socket
14 External control socket
15 Diaphragm rupture indicator socket
16 Mains switch

Key functions

	In continuous display mode (operating)	**In settings mode (settings)**
STOP/START key		
Press briefly	*Stop pump, start pump*	*Stop pump, start pump*
P key		
Press briefly	*Start batch (in "batch" operating mode only), Cancel error*	*Confirm entry- jump to next menu option or continuous display*
Press for 2 s	*Change to settings mode*	---
Press for 3 s	---	*Jump to continuous display*
Press for 10 s	*Software version displayed*	
Press for 15 s	*Load factory settings (calibration)*	---
i key		
Press x1	*Toggle between continuous displays*	*Toggle between "change individual digits" and change a figure"*
Press x2	---	*For "change individual digits": jumps to first digit*
Arrow keys UP and DOWN		
Press separately (until "Set" appears)	*Change directly alterable values*	*Select other settings, change individual digit or figure*
Press simultaneously	*Prime (in "stroke rate" permanent display)*	---

Operating-/Settings Diagram

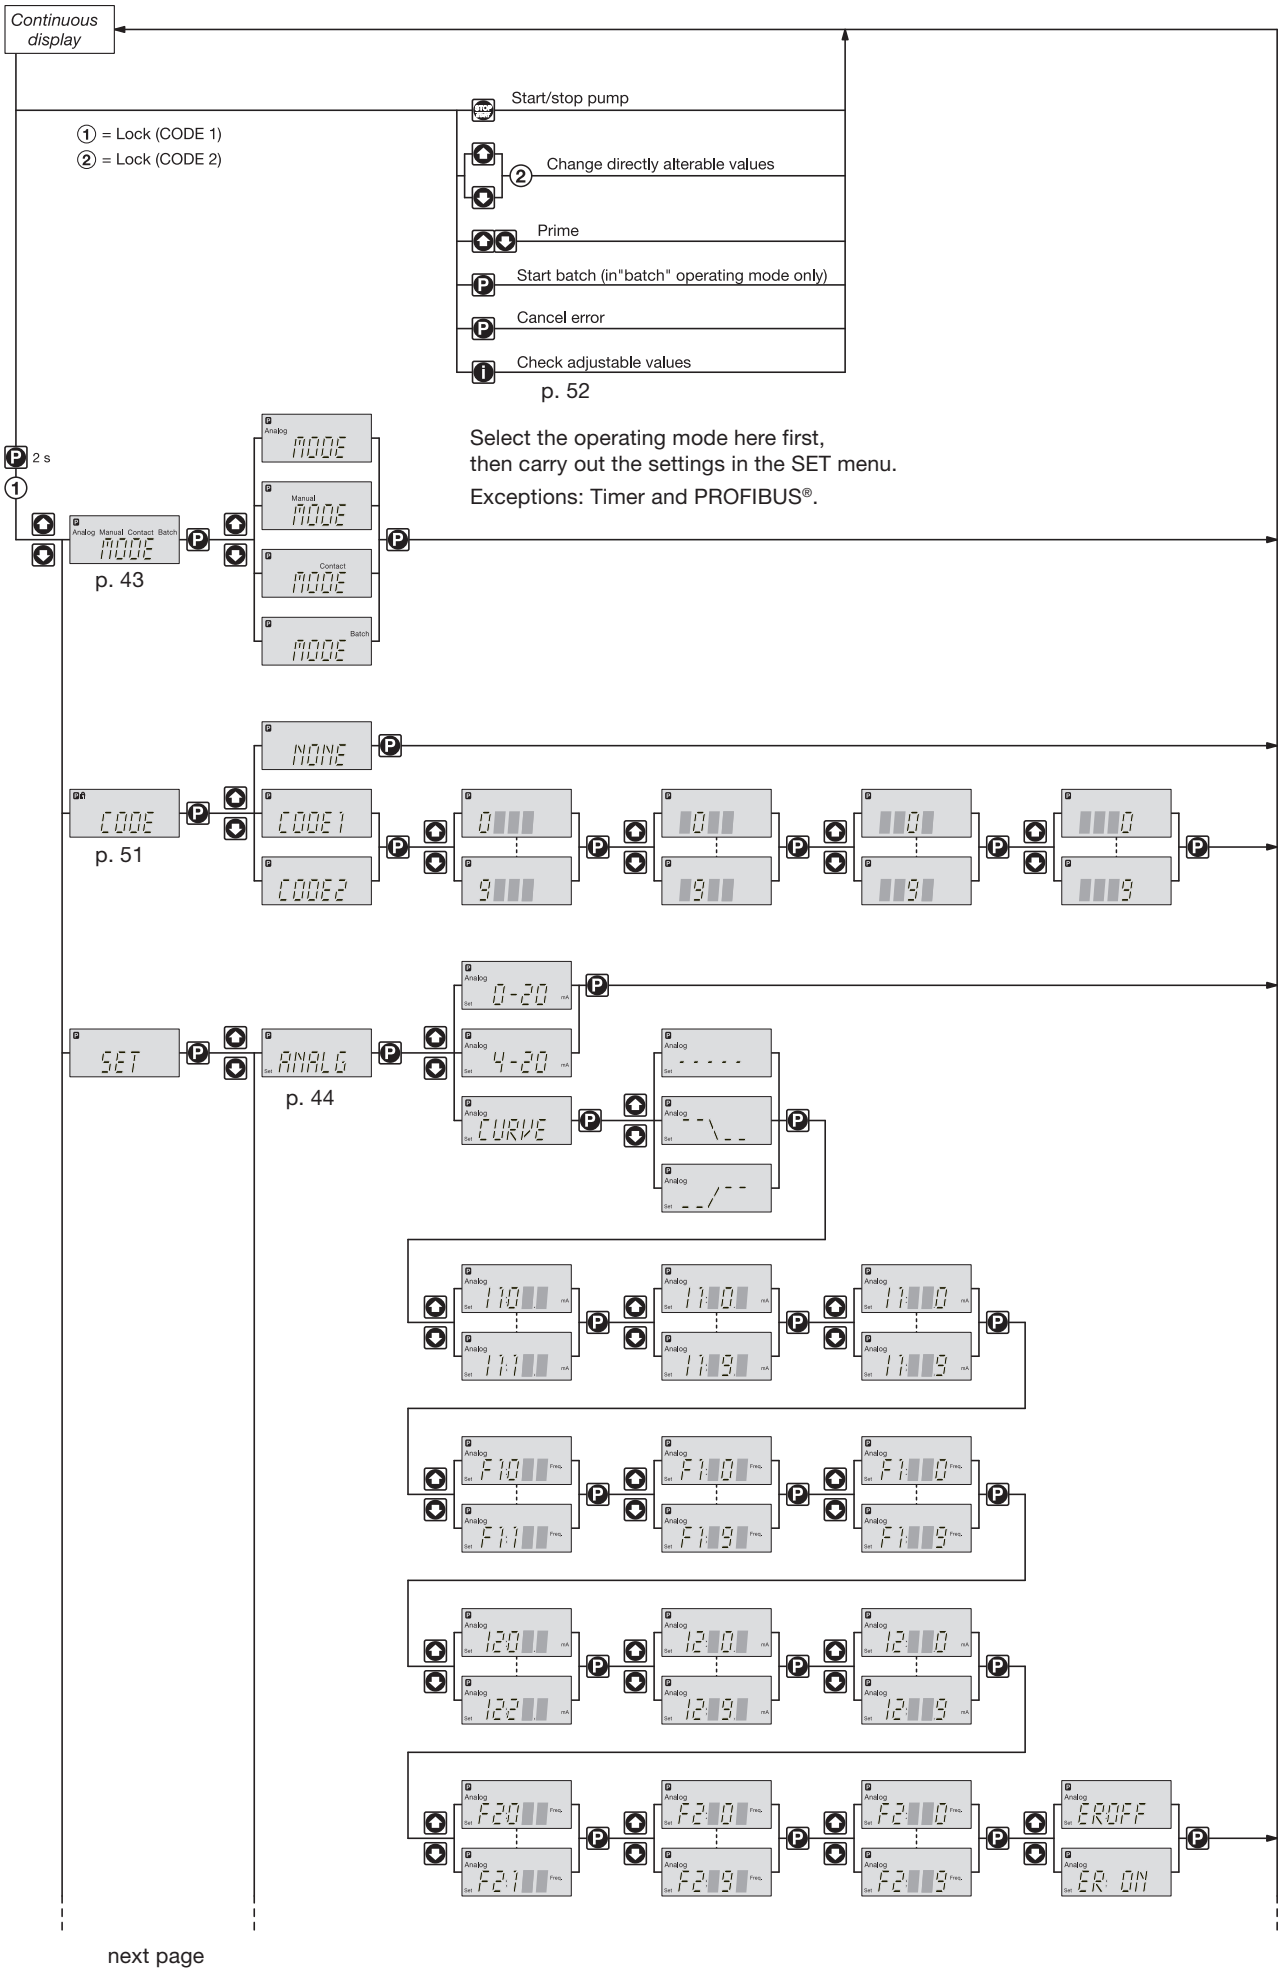

previous page

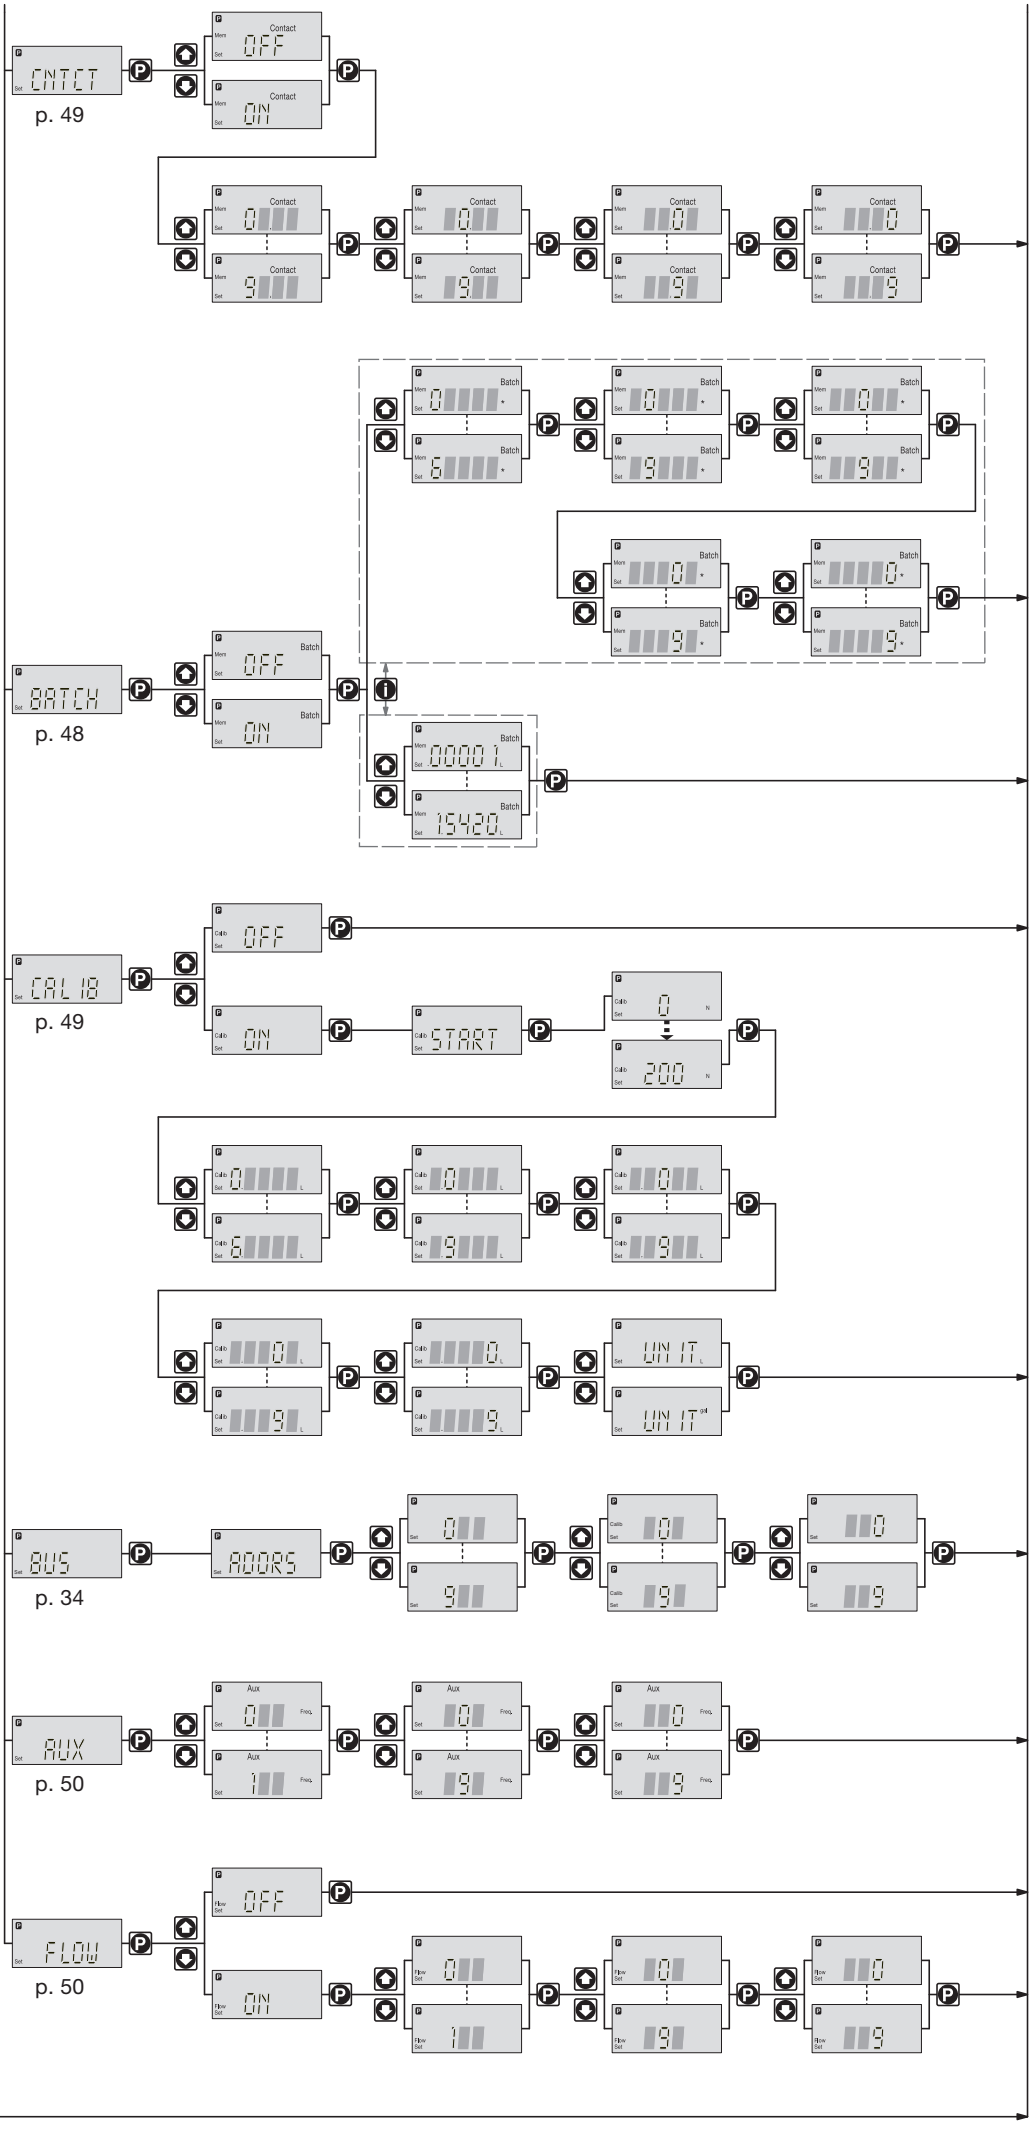

Continuous display

Continuous display	Operating mode "**Analog**" 0-20 mA	Operating mode "**Manual**"	Operating mode **"Contact"** with memory and transfer factor 5	Operating mode **"Batch"** with memory and transfer factor 5
Stroke rate				
Feed rate				
Total stroke number				
Total litres (feed quantity)				
"External" display				
Signal current				
Strokes remaining				
Batch size/ Litres remaining				
Factor				
Stroke length				

◘◘ = UP and/or DOWN arrow keys, directly alterable values

"Mem" appears only when "memory" function activated

		Page
	Identcode ordering system	9
1	**Notes on safety of ProMinent® metering pumps**	11
1.1	General notes	12
1.2	Notes on installation, start-up and operation	12
1.3	Notes on maintenance and repair	13
2	**Product description S2Ba/S2Ca**	14
2.1	Identification of pump type	14
2.2	Design/Functional description	14
2.2.1	Functional description, drive	14
2.2.2	Stroke movement	15
2.2.3	Functional description, delivery unit	16
2.2.4	Integrated overflow valve with bleeder function	17
2.2.5	Diaphragm rupture sensor	19
3	**Technical data**	22
3.1	Technical data Sigma/ 2	22
3.1.1	Capacity data	22
3.1.2	Dimensions Sigma/ 2 S2Ba	24
3.1.3	Dimensions Sigma/ 2 S2Ca	25
3.1.4	Dimensions Sigma/ 2 S2Ba	26
3.1.5	Motor data	26
3.1.6	Stroke actuator drive mechanism	27
3.1.7	Stroke adjuster drive mechanism	27
3.1.8	Electrical data, stroke sensor “Sigma”	27
3.1.9	Electrical data, pacing relay “Sigma” (for the basic version)	28
3.1.10	Sound intensity level	28
4	**Start-up/Maintenance**	30
4.1	Start-up	30
4.2	Maintenance	30
4.3	Replacement of wearing parts	31
5	**Features of the S2Ca metering pumps**	32
5.1	Function description, motors	32
5.2	Function description, controller	33
5.3	Sockets, symbols and wiring diagram	35
5.4	Retrofitting relays	40

6 Control elements 41

7 Settings 42

7.1 Check adjustable values 43

7.2 Change to settings mode 43

7.3 Select operating mode (MODE menu) 43

7.4 Settings for operating mode (SET menu) 44

7.4.1 Settings for “manual” operating mode 44

7.4.2 Settings for “analogue” operating mode (ANALG menu) 44

7.4.3 Settings for “contact” operating mode (CONTCT menu) 46

7.4.4 Settings for “batch” operating mode (BATCH menu) 48

7.5 Settings for programmable functions (SET menu) 49

7.5.1 Settings for “calibration” function (CALIB menu) 49

7.5.2 Settings for “auxiliary frequency” function (AUX menu) 50

7.5.3 Settings for the “flow” function (Flow menu) 50

7.6 Setting code (CODE menu) 50

7.7 Cancel total stroke number or total litres (CLEAR window) 50

8 Operating 51

8.1 Manual operation 51

8.2 Remote control 52

9 Troubleshooting 52

10 Decommissioning and disposal 54

11 Spare parts and accessories 55

Annex 58

Motor data sheet 58

EC Declaration of Conformity 59

Exploded diagrams of liquid ends 61

Exploded diagrams of liquid ends 63

Identcode ordering system

Please enter the identcode on the device label into the grey box below.

Identcode Ordering System Basic Type (S2Ba)

Sigma Basic Type (S2Ba)

S2Ba	Drive type												
	HM	Main drive, diaphragm											
		Pump type*											
			bar	**l/h (50 Hz)**									
		16050	16	50									
		16090	16	90									
		16130	16	130									
		07120	7	120									
		07220	7	220									
		04350	4	350									
			Material Liquid end										
			PV	PVDF (max. 10 bar)									
			SS	Stainless steel									
				Seal material									
				T	PTFE seal								
					Diaphragm								
					0	Standard diaphragm, PTFE version							
					1	Double diaphragm with diaphragm rupture indicator (retro fit possible)							
					S	Multilayer safety diaphragm with visual rupture indicator							
					A	Multilayer safety diaphragm with rupture signalling (contact)							
						Liquid end version							
						0	No spring						
						1	With 2 valve springs, Hastelloy C4, 0.1 bar						
						4	With pressure relief valve, FPM seal, no valve spring						
						5	with overflow valve, FPM gasket with valve springs						
						6	with overflow valve, EPDM gasket, without valve spring						
						7	with overflow valve, EPDM gasket, with valve spring						
							Hydraulic connection						
							0	Standard threaded connector (according to technical data)					
							1	Union nut and PVC insert					
							2	Union nut and PP insert					
							3	Union nut and PVDF insert					
							4	Union nut and stainless steel insert					
							7	Union nut and PVDF hose nozzle					
							8	Union nut and stainless steel hose nozzle					
							9	Union nut and stainless steel welding sleeve					
								Version					
								0	With ProMinent® logo (standard)				
								1	Without ProMinent® logo (standard)				
								M	Modified				
									Electrical power supply				
									S	3 ph, 230 V/400 V 50/60 Hz			
									M	1 ph, AC, 230 V/50/60 Hz			
									N	1 ph, AC, 115 V/50/60 Hz			
									L	3 ph, 230 V/400 V, 50 Hz, (Exe, Exd)			
									P	3 ph, 265 V/440 V, 60 Hz, (Exe, Exd)			
									R	3 ph, variable speed motor, 230/400 V			
									V (0)	Variable speed motor with integrated frequency converter 1 pH, 230 V, 50/60 Hz			
									Z	Speed control compl 1 ph 230 V, 50/60 Hz (variable speed motor + FC)			
									1	No motor, with B14 flange (Gr. 71 (DIN))			
									2	No motor, C 56 flange (NEMA)			
									3	No motor, B5 Gr. 63 (DN)			
										Enclosure rating			
										0	IP 55 (standard)		
										1	Exe motor version ATEX-T3		
										2	Exd motor version ATEX-T4		
										A	ATEX power end		
											Stroke sensor		
											0	No stroke sensor (standard)	
											2	Pacing relay (reed relay)	
											3	Stroke sensor (Namur) for hazardous locations	
												Stroke length adjustment	
												0	Manual (standard)
												1	With stroke positioning motor, 230 V/50/60 Hz
												2	With stroke positioning motor, 115 V/50/60 Hz
												3	With stroke control motor, 0...20 mA 230 V/50/60 Hz
												4	With stroke control motor, 4...20 mA 230 V/50/60 Hz
												5	With stroke control motor, 0...20 mA 115 V/50/60 Hz
												6	With stroke control motor, 4...20 mA 115 V/50/60 Hz

* Item 1 and 2=backpressure [bar]; item 3, 4, 5=output [l/h]

Identcode ordering system

Please enter the identcode on the device label into the grey box below.

Identcode Ordering System Control Type (S2Ca)

Sigma Control Type (S2Ca)

The 60 Hz performance data apply to the S2Ca pump types, however, at max. 200 strokes/min.

S2Ca	Drive type																
	HM	Main drive, diaphragm															
		Pump type*															
			bar	**l/h**					**bar**	**l/h**							
		16050	16	60				07120	7	144							
		16090	16	108				07220	7	264							
		16130	16	130				04350	4	350							
			Material Liquid end														
			PV	PVDF (max. 10 bar)													
			SS	Stainless steel													
				Seal material													
				T	PTFE seal												
					Diaphragm												
					0	Standard diaphragm											
					1	Double diaphragm with rupture indicator incorporating “Pump stopping” function											
					2	Double diaphragm with rupture indicator incorporating “Pump alarm” function											
					S	Multilayer safety diaphragm with visual rupture indicator											
					A	Multilayer safety diaphragm with rupture signalling; pump stops											
					B	Multilayer safety diaphragm with rupture signalling; pump emits alarm											
						Liquid end version											
						0	No springs										
						1	With 2 valve springs,Hastelloy C4,0.1 bar										
						4	With relief valve, FPM seal, no valve spring										
						5	with overflow valve, FPM gasket with valve springs										
						6	with overflow valve, EPDM gasket, without valve spring										
						7	with overflow valve, EPDM gasket, with valve spring										
							Hydraulic connection										
							0	Standard threaded connector (according to technical data)									
							1	Union nut and PVC insert									
							2	Union nut and PP insert									
							3	Union nut and PVDF insert									
							4	Union nut and stainless steel insert									
							7	Union nut and PVDF hose nozzle									
							8	Union nut and stainless steel hose nozzle									
							9	Union nut and welding sleeve SS									
								Version									
								0	With ProMinent® logo								
								1	Without ProMinent® logo								
									Electrical power supply								
									U	1 ph 100-230 V ±10 %, 50/60 Hz							
										Cable and plug							
										A	2 m European	C	2 m Australian				
										B	2 m Swiss	D	2 m USA				
											Relay						
											0	No relay					
											1	With fault indicating relay (normally energised) 1x changeover 230V – 2A					
											3	With fault indicating relay (normally de-energised) 1x changeover 230V – 2A					
											4	As 1 with pacing relay 2x normally open 24 V – 100 mA					
											5	As 3 with pacing relay 2x normally open 24 V – 100 mA					
											A	shut-off and warning relays normally closed 2x normally open 24 V – 100 mA					
											C	4-20 mA output = stroke length x frequency 1 x fault-indicating relay make contact 24 V - 100 mA					
											F	Power relay normally closed 1 x changeover 230 V – 8 A					
												Control variant					
												0	Manual + external with pulse control				
												1	Manual external + pulse control + analogue				
												4	As 0 + process-timer				
												5	As 1 + process-timer				
												P**	As 1 + PROFIBUS® DP-interface, D sub 9				
												R**	as 1 + PROFIBUS®DP interface, M12				
													Access code				
													0	No access code			
													1	With access code			
													2	as 0 with message in the event of a manual stop			
													3	as 1 with message in the event of a manual stop			
														Metering monitor			
														0	Input with pulse evaluation		
															Stroke length adjustment		
															0	Manual	
															C	Manual + calibration	

* Item 1 and 2=backpressure [bar]; item 3, 4, 5=output [l/h]

** For the option PROFIBUS® no relay can be selected

1 Notes on safety of ProMinent® metering pumps

General user instructions

Please read through the following user instructions carefully! They will help you get the best use out of the operating instruction manual.

The following are highlighted in the text:

- Enumerations

▶ Instructions

Operating guidelines:

NOTE

Notices are intended to make your work easier.

and safety guidelines:

WARNING

Describes a potentially dangerous situation. If not avoided. could cause fatal or serous injury.

CAUTION

Describes a potentially dangerous situation. If not avoided. could cause slight or minor injury or damage to property.

Please also note the guidelines in “General Operating Instruction Manual for ProMinent® Motor-Driven Metering Pumps and Hydraulic Accessories”!

Please give the order number and the serial number, which you will find on the nameplates of the pump itself, in the event of any query or spare part order. This facilitates identification of the pump.

EX-pump only: The nameplates affixed to the title page are identical to those on the pump supplied to enable clear identification on the correct operating instruction manual for the pump

1.1 General notes

WARNING

- **Only EX pump: Please thoroughly read the chapter “Important Additions for Metering Pumps in the EX Area” of the “General Operating Instructions ProMinent Motor Metering Pumps and Hydraulic Accessories”!**
- **The equipment/devices may only be used for their intended purpose.**
- **ProMinent® metering pumps must not be assembled with parts which are not tested and recommended by ProMinent otherwise this can lead to injury to persons and damage to property for which no liability will be accepted!**
- **Pumps must be accessible at all times to facilitate operation and maintenance. Access points must not be obstructed or blocked!**
- **Before carrying out any maintenance and repair work always drain off and flush out the liquid end first if hazardous or unknown metered media are used!**
- **When metering hazardous or unknown liquids, always wear safety clothing (safety goggles, gloves, ...) when working on the liquid end!**
- **You must observe the guidelines in this operating instructions manual and the ”General operating instructions manual for ProMinent® motor-driven metering pumps and hydraulic accessoires” on assembly, installation and maintenance!**

1.2 Notes on installation, start-up and operation

WARNING

- **Only EX pump: Please thoroughly read the chapter “Important Additions for Metering Pumps in the EX Area” of the “General Operating Instructions ProMinent Motor Metering Pumps and Hydraulic Accessories”!**
- **The metering pump can contain water residue in the liquid end as the result of testing at the factory!**

  If handling media which must not come in contact with water, all traces of water must be removed from the liquid end before start-up! For this purpose, turn the pump through 180° and drain off the liquid end then flush with a suitable medium from above via the intake connection!

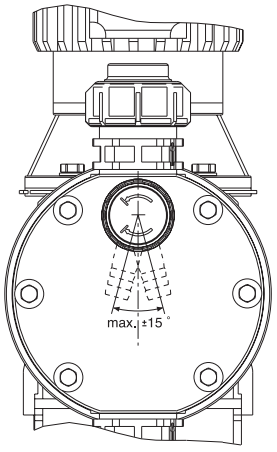

Fig. 1

- **Do not connect mains voltage to the control cable!**
- **When operating the metering pump against a closed shut-off element on the pressure side or in the event of pressure peaks during the metering stroke, the system pressure can reach a multiple of the maximum permissible operating pressure that can consequently cause the pressure line to burst!**

  To avoid this situation, an overflow is recommended for the purpose of limiting the maximum permissible operating pressure of the pump or system.
- **Do not connect a metal bypass line to the overflow valve on the PVT delivery unit! This could cause cracks in the delivery unit!**
- **Leaks can develop in the relief valve can or parts of it can corrode! For this reason, the bypass line should only be routed falling continuously and, moreover, the tubing nozzle should only be inserted facing downwards (see fig. 1)!**
- **No chemical residues must remain in the bypass line on the relief valve of the liquid end!**

IMPORTANT

- **Set stroke length only with pump in operation!**
- **Pull the red plug for venting the gear unit during initial operation of the Sigma/ 2 metering pump (refer to Fig. 3, item 10)!**

NOTE

- **The pump must be secured in such a way that no vibrations can occur! The valves of the liquid end must always be positioned vertically in order to ensure trouble-free operation!**
- **Suction, discharge and bypass lines must always be routed in such a way that a mechanically stress-free connection is ensured to the dosing head!**

  The lines must be secured such that no vibrations can occur!
- **Only use the clamping rings and hose sockets intended for the relevant hose diameter as well as original hoses with the specified hose dimensions and wall thickness otherwise the stability and durability of the connection will not be guaranteed!**

  Avoid reducing hose sizes!

  Observe the permissible pressure of the hoses!

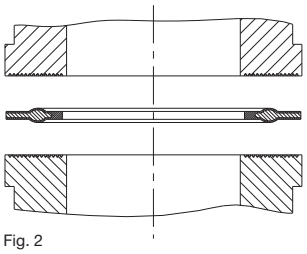

Fig. 2

- **The pump is supplied with PTFE moulded composite seals with a flare, which are used for the pump connections that seal the connections between the grooved pump valves and the grooved ProMinent (fig. 3).**

  But if such an insert of a connection is not fluted (e.g. third-party part), a flat elastomer gasket has to be used (fig. 3). Otherwise, leakage may occur at this connection.
- **A vent with return to the supply tank is advisable when metering extremely aggressive or hazardous media!**

  In addition, a shut-off valve should be provided on the delivery or intake side!

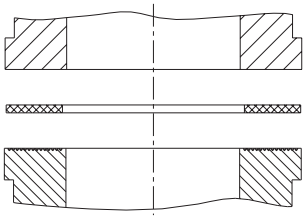

Fig. 3

1.3 Notes on maintenance and repair

WARNING

- **Only EX pump: Please thoroughly read the chapter "Important Additions for Metering Pumps in the EX Area" of the "General Operating Instructions ProMinent Motor Metering Pumps and Hydraulic Accessories"!**
- **Only send the equipment for repair or maintenance in a cleaned condition and with the liquid end flushed. However, should any safety precautions be necessary even after careful draining and cleaning of the equipment, the required information must be listed in the Safety Declaration!**
  The Safety Declaration forms part of the inspection/repair contract.
  Maintenance or repair work will only be carried out if a Safety Declaration - correctly and fully completed by an authorised and qualified member of the Operator's staff - is available.
  A copy of the form is included in the "General operating instructions for ProMinent motor-driven dosing pumps and hydraulic accessories" or can be downloaded at www.prominent.com.
- **Only specially trained and authorized persons are permitted to carry out maintenance on metering pumps and their peripherals!**
- **If hazardous or unknown metering media are used, always flush out the liquid end first before carrying out any maintenance and repair work!**
- **When metering hazardous or unknown liquids, always wear safety clothing (safety goggles, gloves, ...) when working on the liquid end!**
- **Always depressurize the delivery line first before carrying out any work on the pump!**
  Always discharge and flush liquid end!
  Observe safety data sheets for metered liquid!
- **Disconnect power plug or power supply line before opening the plug!**
  Isolate relay option if applicable!
  Check to ensure power is disconnected!
  Secure pump while carrying out repairs to ensure it cannot be switched on unintentionally!
- **Pumps for metering radioactive media must not be shipped through standard channels!**

NOTE

The metering pump must be in a cleaned condition with the liquid end flushed if returned for repair!

2 Product description S2Ba/S2Ca

Use for intended purpose

- The pump is designed as a liquid medium metering pump; it serves the purpose of metering liquid medium within the specified line system!
- In potentially explosive atmospheres in zone 1, device category II 2G of explosion group II C, the pump must only be operated according to the relevant type plate (and the respective EC Declaration of Conformity) for pumps for potentially explosive atmospheres complying with Directive 94/9/EC in accordance with the European guidelines.
- As of 01.07.2003, only pumps are permitted to be used in potentially explosive atmospheres that have the respective markings according to EG-Ex-RL 94/9. The explosion group, category and protection class declared on the marking must correspond with or be better than the given conditions in the intended field of application.
- Operate the pump only within the conditions described in the technical data!
- General restrictions with regard to viscosity limits, chemical resistance and density must be observed (refer to ProMinent® chemical resistance list (equipment catalogue or www.prominent.com))!
- All other applications or conversion are prohibited!
- The pump is not designed to meter gaseous media as well as solids.
- The pump is not suitable for metering combustible liquids!
- Pumps without respective type plate (and the respective EC Declaration of Conformity) for pumps for potentially explosive atmospheres must never be operated in potentially explosive atmospheres.
- Only specifically trained and authorized personnel are permitted to operate the pump!
- You are obliged to observe the data in the operating instructions on the various life phases of the device!

2.1 Identification of pump type

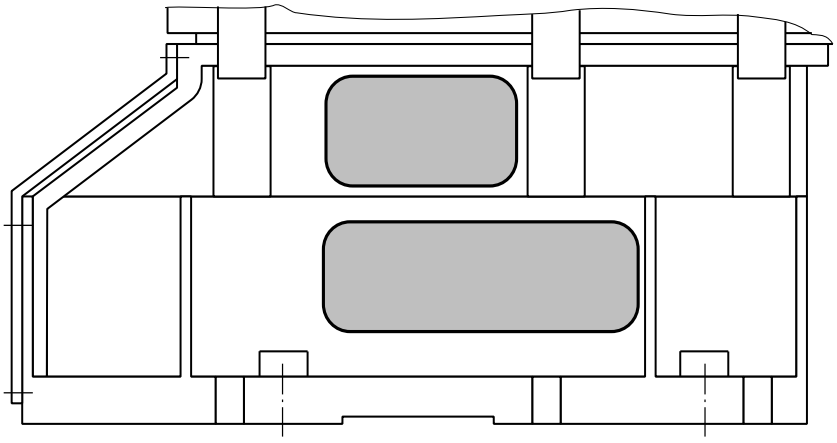

Fig. 4

The identity code and serial number are given in addition to the standard technical specifications. These two numbers must always be quoted when making any enquiries as they enable distinct identification of the type of metering pump.

2.2 Design/Functional description

2.2.1 Functional description, drive

The ProMinent® Sigma/ 2 diaphragm-type metering pump is an oscillatory displacement pump with the stroke length adjustable in steps of 0.5 %. It is driven by electric motor **(1)**. The rotary drive of the electric motor is stepped down by worm gear and transmitted via the eccentric roller **(3)** to the push rod **(4)** connected to fork **(8)** and converted into oscillatory movement. Return spring **(5)** presses the fork with push rod positively against the eccentric roller thus producing the return stroke. The stroke is adjusted by means of stroke adjustment knob **(6)** and spindle **(7)** by limiting the return stroke. Stroke movement is transmitted directly to the displacement diaphragm. Interacting with the valves, this diaphragm produces the overpressure and vacuum in the liquid end necessary for delivery. Flow is pulsating.

In the basic type, the electric motor is normally a 3-ph extended-range AC motor (refer to Section 3 for other options).

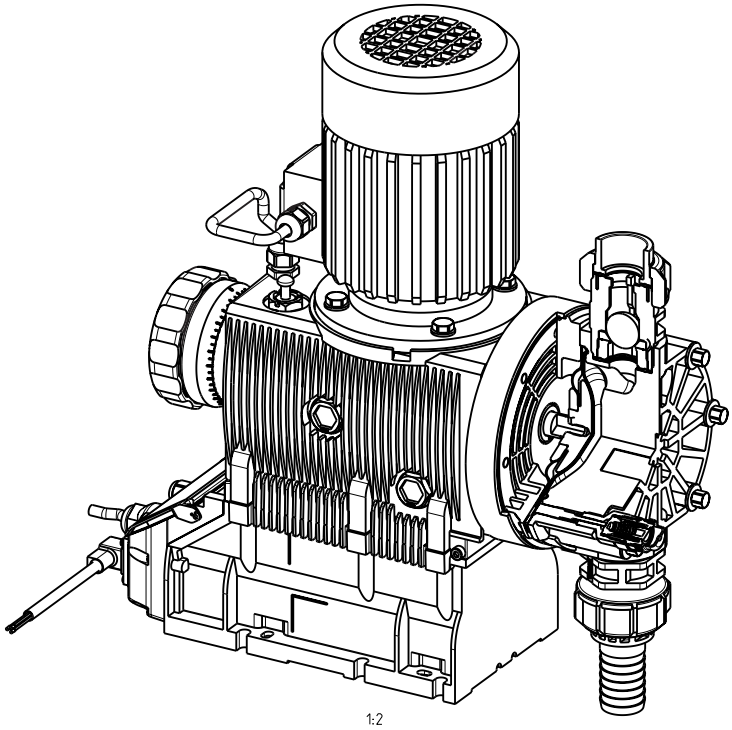

Fig. 5
61_01-101_00_25-01

2.2.2 Stroke movement

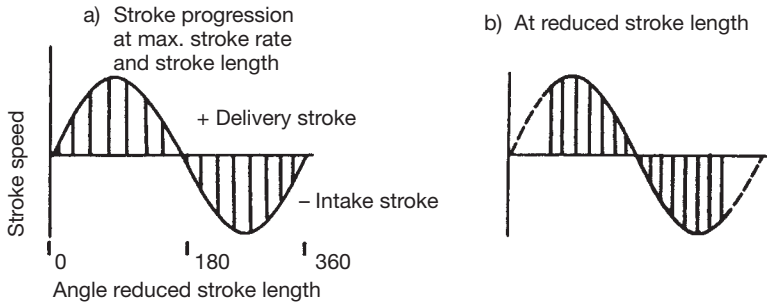

Fig. 6

Set stroke length dependent on the required delivery capacity.

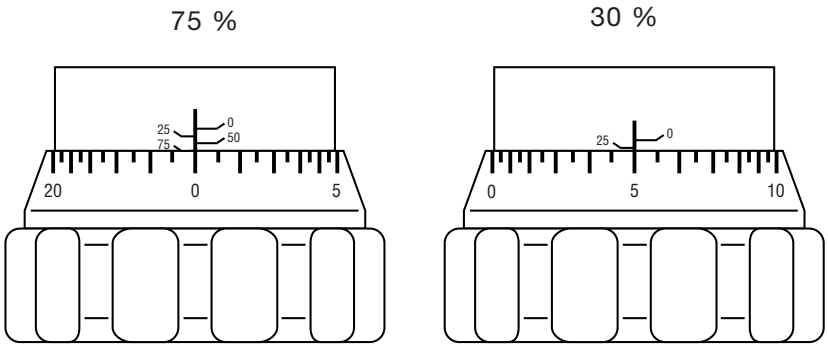

Fig. 7

NOTE

- **For outgassing media, please select a stroke length as large as possible!**
- **For a good mixing, please select a stroke length as large as possible!**
- **For a precise dosing at quantity-proportional dosing, do not adjust the stroke length below 20 %!**

2.2.3 Functional description, delivery unit

The heart of the liquid end is the multi-layer safety diaphragm **(2)** patented by ProMinent. It hermetically seals the delivery chamber of the liquid end **(4)** and produces a displacement in the dosing head. The end disc **(5)** made of chemically-resistant plastic, together with the safety diaphragm **(13)** separates the drive housing from the delivery unit and protects the drive from dust and corrosion. Delivery is based on the interaction between intake valve **(1)** and head valve **(3)** of the same design together with the diaphragm movement. The valve balls can be supported with springs for metering viscous media.

The connection dimensions of valves and liquid ends of the same size but with different materials are identical. These parts can be interchanged as required.

Materials and dimensions are specified in Section 3, Technical data.

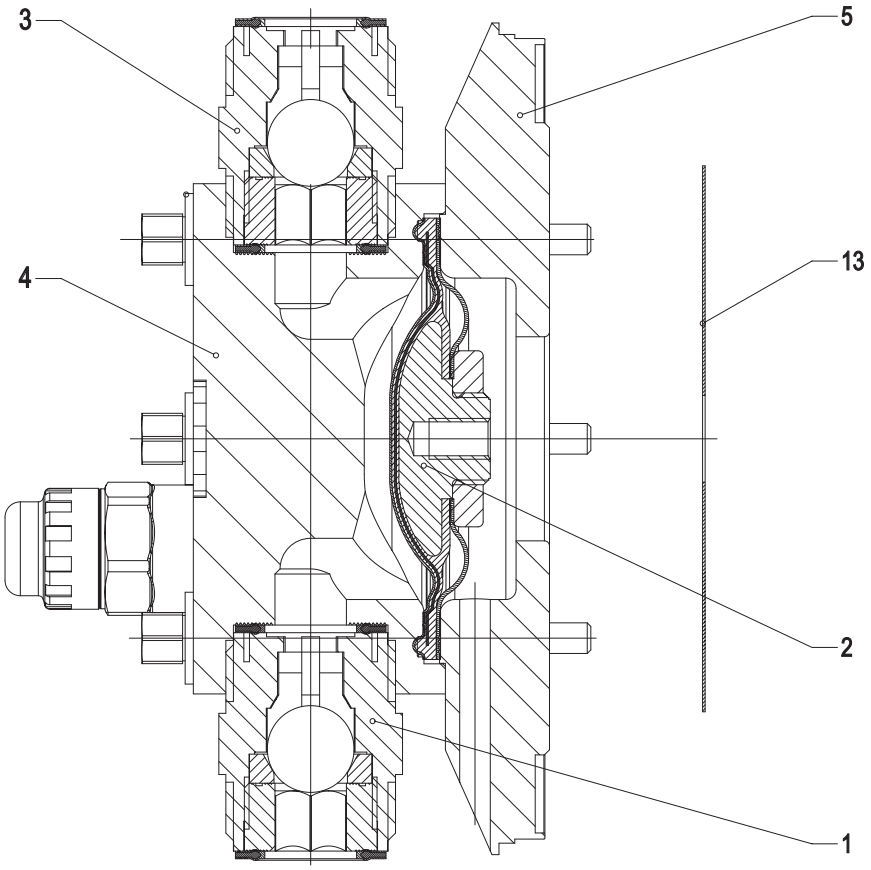

Fig. 8
61_05-103_00_73-03

2.2.4 Integrated overflow valve with bleeder function

Task:

The task of the overflow valve is to protect the motor and gear unit against impermissible overpressure caused by the metering pump.

This function is produced by a spring-loaded ball.

A pressure relief mechanism for the bleeder function is provided.

Design and functional description
(refer to Fig. No. 6 and 7)

Initially, the overflow valve illustrated under item 102 operates as a simple directly controlled **relief valve**. As soon as the pressure set with spring item 132 is exceeded, the effective pressure raises ball item 130. The liquid then flows off into the tank via hose connection item 128.

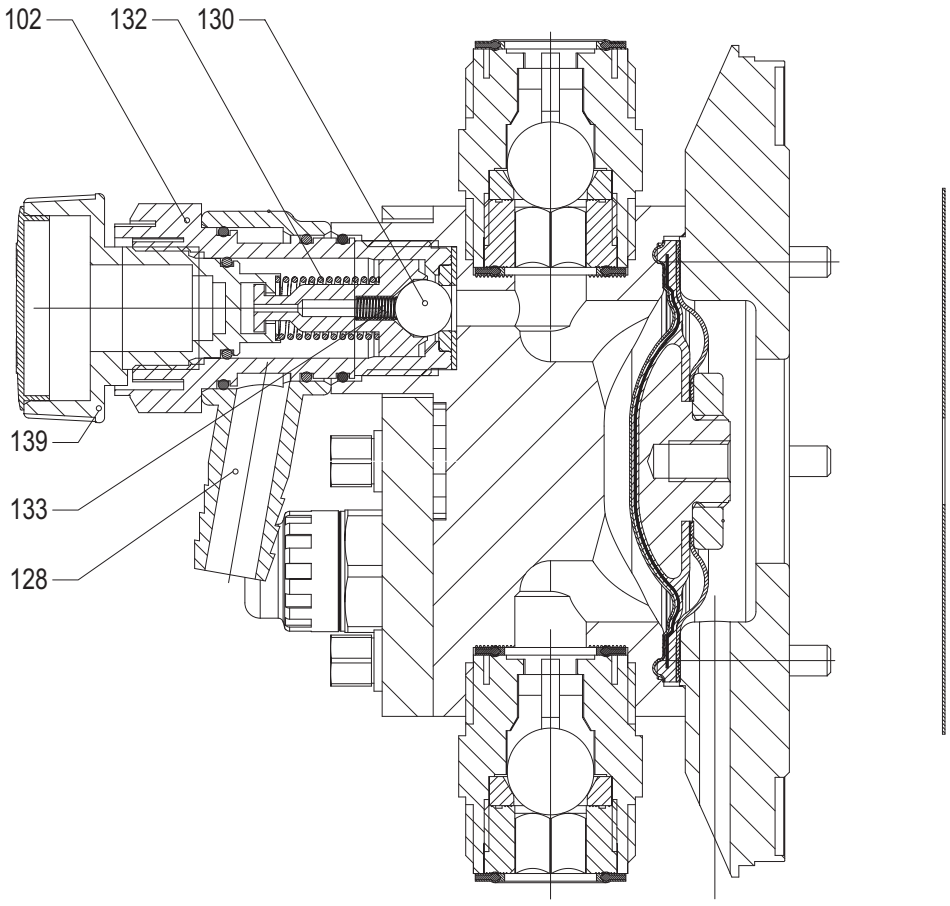

Overflow valve Sigma/ 2 liquid end, 10 bar PVT	Identcode Type: 16050, 16090, 16130
Overflow valve Sigma/ 2 liquid end, 7 bar PVT	Identcode Type: 07120, 07220
Overflow valve Sigma/ 2 liquid end, 4 bar PVT	Identcode Type: 04350

Fig. 9
61_05-103_00_74-03

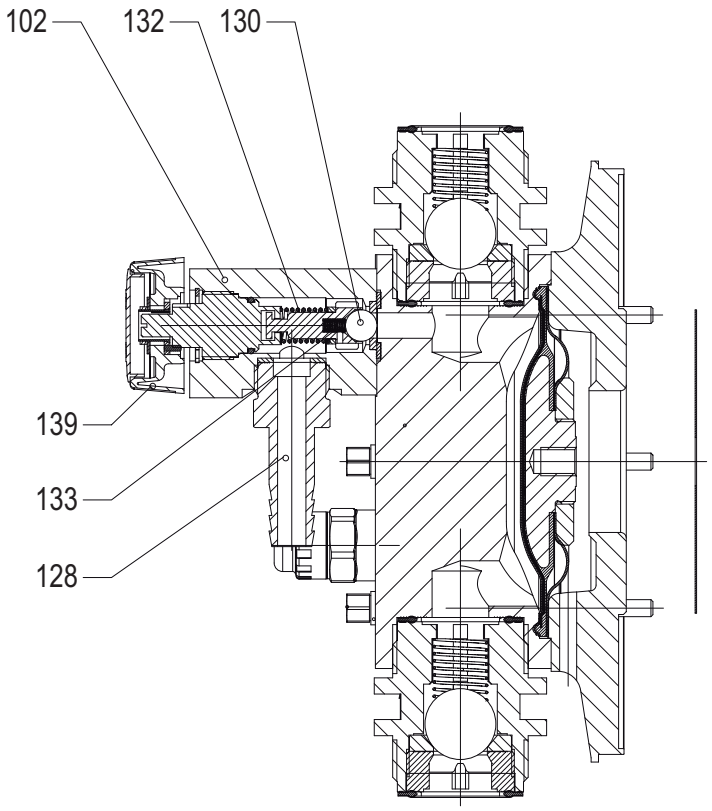

Overflow valve Sigma/ 2 liquid end, 16 bar SST	Identcode Type: 16050, 16090, 16130
Overflow valve Sigma/ 2 liquid end, 7 bar SST	Identcode Type: 07120, 07220
Overflow valve Sigma/ 2 liquid end, 4 bar SST	Identcode Type: 04350

Fig. 10
61_05-103_00_90-03

WARNING

- **Only EX pump: Please thoroughly read the chapter “Important Additions for Metering Pumps in the EX Area” of the “General Operating Instructions ProMinent Motor Metering Pumps and Hydraulic Accessories”!**

IMPORTANT

- **Once the pump has primed, turn knob item 139 in clockwise direction as far as it will go towards ”close“! The pump is now operational.**
- **The bypass line must always be closed and must be routed back into the supply tank. Connection via hose connection item 128.**
- **Minimal overflow can occur in the bypass line when the valve operates close to the overpressure function.**

The bleeder function is achieved by turning knob item 139 in counterclockwise direction as far as it will go towards ”open“: Priming aid for starting up pump against pressure. The force of spring item 132 relieves ball item 130 which is controlled by the lower spring force of bleeder spring item 133.

Technical data

Corresponding to the type of pump, overflow valves are available for pressure stages p_{nom} 4, 7, 10, 12 and 16 bar with (1.05 ... 1.15) xp_{nom} opening pressure.

Material in contact with metered medium

Material version	Balls	Integrated overload valve
PVT	Ceramic / glass*	PDFE/FPM or EPDM
SST	Stainless steel 1.4404	Stainless steel/ FPM or EPDM

*for 07120, 07220, 04350

FPM = Fluorine Rubber

WARNING

- The relief valve protects the metering pumps against non-permissible excess pressure caused by the metering pump; it does not protect the station.
- Use the overflow value only in connection with liquid with a viscosity of up to max. 200 mPa s.
- When carrying out maintenance work on the overcurrent valve, pay attention to the tensioned state of the pressure spring item132! Wear safety goggles!

IMPORTANT

- **The ceramic ball and ball seat of the overflow valve are wearing parts. Slight leakage can occur at the safety valve after a prolonged period of operation. The ball and ball seat should be replaced if leaks occur.**
- **The bypass line must always be connected and must be routed back into the supply tank.**
- The pump must not be operated without the bypass line connected.
- The bypass line must not be connected in the intake line (the bleeder function will no longer be guaranteed). The bypass line must be routed back into the supply tank.

2.2.5 Diaphragm rupture sensor

Function:

Monitors the seals in the metering diaphragm. The liquid end can continue to function for a short period in emergency mode, i.e. full operating pressure, no leakage, even after diaphragm rupture.

Design and function description

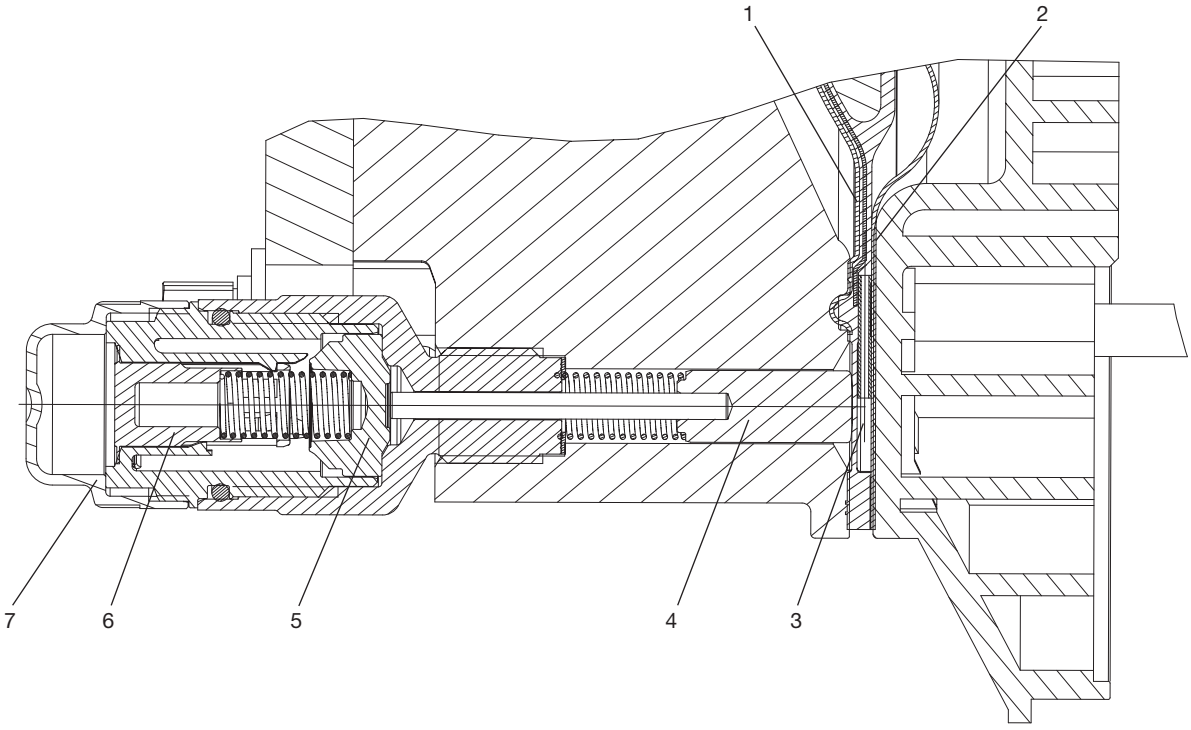

Fig. 11: Section through the diaphragm rupture signalling Sigma (without electrical component parts)

1 Working layer (≙ working diaphragm)
2 Safety layer (≙ safety diaphragm)
3 Lug
4 Plunger
5 Diaphragm rupture sensor
6 Cylinder, red
7 Cover, transparent

The multilayer safety diaphragm has the same function as the conventional double diaphragm systems with working and safety diaphragm; however, it has the advantage that both diaphragms are grouped to form a unit.

If the working layer (1) ruptures, the metering medium penetrates between the working layer and the safety layer (2) and spreads. The safety layer ensures that no metering medium leaks to the outside.

As soon as the metering medium reaches the lug (3) at the edge of the multilayer safety diaphragm, the lug expands. The lug presses on a plunger (4) in the diaphragm rupture sensor (5) and the sensor triggers.

In **mechanical** diaphragm rupture sensors, the sunk red cylinder (6) under the transparent cover (7) jumps to the front such that it is clearly visible.

In **electrical** diaphragm rupture sensors, a switch switches. A connected signalling unit signals the diaphragm rupture. In the control version, the diaphragm rupture sensor is connected to the “socket for diaphragm rupture monitor”. In case of a diaphragm rupture, the red LED indicator “Fault” is illuminated at the pump, the identifier “Error" and DIAPH flash on the LCD screen. Depending on the selected Identcode version in “Displacement body”, the pump continues to meter (“Pump emits alarm”) or stops (“Pump stops”).

WARNING

- **Only EX pump: Please thoroughly read the chapter “Important Additions for Metering Pumps in the EX Area” of the “General Operating Instructions ProMinent Motor Metering Pumps and Hydraulic Accessories”!**

IMPORTANT

- **With the S3Ba, the customer should install a diaphragm rupture signal monitor with electrical diaphragm sensors or ensure that the metering pump will stop after a diaphragm rupture signal.**
- **In the event of diaphragm failure, a signal is triggered as from 2 bar system backpressure.**
- **Exact pump delivery can no longer be guaranteed after failure of the working diaphragm.**

Electrical data for the diaphragm breakage sensor

IMPORTANT

- **Before commencing operation, install the provided diaphragm breakage sensor together with the gasket (Item159) and make the electrical connections.**
- **For safety reasons it is advisable to connect a safe low voltage (e.g. EN 60335-1 (SELV)).**

a) Switch contact

30 V DC/1 A or 125 V AC/0.6 A or 250 V AC/0.3 A

The diaphragm sensor is a N/C relay.

NOTE

- **The cable priority is arbitrary.**

b) Namur sensor, intrinsically

Blue	-
Brown	+

5-25 V DC, Namur type and/or DIN 60947-5-6, zero volt design.
Rated voltage: 8 V DC (R_i ~ 1 kΩ)
Power consumption:
Active surface, uncovered > 3 mA
Active surface, covered < 2 mA
Rated switching distance: 1.5 mm
The monitor/feeder must be capable of evaluating current changes in order to indicate diaphragm rupture!

WARNING

- **Only EX pump: Please thoroughly read the chapter “Important Additions for Metering Pumps in the EX Area” of the “General Operating Instructions ProMinent Motor Metering Pumps and Hydraulic Accessories”!**

3 Technical data

WARNING

Only with modified version: Observe the "Enhancement with modified version" at the end of the chapter in all cases!
It replaces and supplements the technical data!

3.1 Technical data Sigma/ 2

3.1.1 Capacity data

Technical data S2Ba at 50 Hz operation

	Feed rate at maximum back pressure			Max. stroke rate	Suction lift	Admissible priming pressure suction side	Connection suction / discharge side	Shipping weight
Pump type Sigma	**bar**	**l/h**	**ml/stroke**	**strokes/min.**	**m WC**	**bar**	**G - DN**	**kg**
16050 PVT	10	50	11.4	73	7	3	1"-15	15
16050 SST	16	48	11.4	73	7	3	1"-15	20
16090 PVT	10	90	11.4	132	7	3	1"-15	15
16090 SST	16	86	11.4	132	7	3	1"-15	20
16130 PVT	10	130	10.9	198	7	3	1"-15	15
16130 SST	16	125	10.9	198	7	3	1"-15	20
07120 PVT	7	120	27.4	73	5	1	20*	16
07120 SST	7	120	27.4	73	5	1	20*	24
07220 PVT	7	220	27.7	132	5	1	20*	16
07220 SST	7	220	27.7	132	5	1	20*	24
04350 PVT	4	350	29.4	198	5	1	20*	16
04350 SST	4	350	29.4	198	5	1	20*	24

All performance data applies to water at 20 °C.

The suction lift applies when the suction line and liquid end are full and correctly installed.

* Sigma types 07120, 07220 and 04350, the valves used in the liquid end are DN 25 (G1 1/2). Since DN 20 is usually adequate for this tubing (see Technical Data, connection-suction/discharge side) the connector parts to be ordered by Identcode (e.g. washers) have already been reduced to DN 20, i.e. tubing and accessories can be DN 20.

Technical data S2Ba at 60 Hz operation

	Feed rate at maximum back pressure			Max. stroke rate	Suction lift	Admissible priming pressure suction side	Connection suction / discharge side	Shipping weight
Pump type Sigma	**bar**	**psi**	**l/h/gph**	**strokes/min.**	**m WC**	**bar**	**G - DN**	**kg**
16050 PVT	10	145	60/ 15.9	87	7	3	1"-15	15
16050 SST	16	232	57/ 15.2	87	7	3	1"-15	20
16090 PVT	10	145	108/ 28.5	156	7	3	1"-15	15
16090 SST	16	232	103/ 27	156	7	3	1"-15	20
16130 PVT	10	145	156/ 41	232	7	3	1"-15	15
16130 SST	16	232	150/ 39.6	232	7	3	1"-15	20
07120 PVT	7	100	144/ 38	87	5	1	20*	16
07120 SST	7	100	144/ 38	87	5	1	20*	24
07220 PVT	7	100	264/ 69.7	156	5	1	20*	16
07220 SST	7	100	264/ 69.7	156	5	1	20*	24
04350 PVT	4	58	420/ 111	232	5	1	20*	16
04350 SST	4	58	420/ 111	232	5	1	20*	24

All performance data applies to water at 20 °C.

The suction lift applies when the suction line and liquid end are full and correctly installed.

* Sigma types 07120, 07220 and 04350, the valves used in the liquid end are DN 25 (G1 1/2). Since DN 20 is usually adequate for this tubing (see Technical Data, connection-suction/discharge side) the connector parts to be ordered by Identcode (e.g. washers) have already been reduced to DN 20, i.e. tubing and accessories can be DN 20.

Technical data S2Ca

	Feed rate at maximum back pressure			Max. stroke rate	Suction lift	Admissible priming pressure suction side	Connection suction / discharge side	Shipping weight
Pump type Sigma	**bar**	**l/h**	**ml/stroke**	**strokes/min.**	**m WC**	**bar**	**R - DN**	**kg**
16050 PVT	10	145	60/ 16	90	7	2	1"-15	17
16050 SST	16	232	60/ 16	90	7	2	1"-15	22
16090 PVT	10	145	95/ 25	160	7	2	1"-15	17
16090 SST	16	232	95/ 25	160	7	2	1"-15	22
16130 PVT	10	145	136/ 36	200	7	2	1"-15	17
16130 SST	16	232	136/ 36	200	7	2	1"-15	22
07120 PVT	7	100	148/ 39	90	5	1	1½ - 20*	18
07120 SST	7	100	148/ 39	90	5	1	1½ - 20*	26
07220 PVT	7	100	232/ 61	160	5	1	1½ - 20*	18
07220 SST	7	100	232/ 61	160	5	1	1½ - 20*	26
04350 PVT	4	58	350/ 93	200	5	1	1½ - 20*	18
04350 SST	4	58	350/ 93	200	5	1	1½ - 20*	26

All performance data applies to water at 20 °C.

The suction lift applies when the suction line and liquid end are full and correctly installed.

* Sigma types 07120, 07220 and 04350, the valves used in the liquid end are DN 25 (G1½). Since DN 20 is usually adequate for this tubing (see Technical Data, connection-suction/discharge side) the connector parts to be ordered by Identcode (e.g. washers) have already been reduced to DN 20, i.e. tubing and accessories can be DN 20.

Materials in contact with chemicals

Material version	Liquid end	Suction/ discharge connector	Seals/ Ball seat	Balls	Springs	Integrated overload valve
PVT	PVDF	PVDF	PTFE/PTFE	Ceramic / glass*	Hastelloy C	PDFE/FPM or EPDM
SST	Stainless steel 1.4571/1.4404	Stainless steel 1.4581	PTFE/PTFE	Stainless steel 1.4404	Hastelloy C	Stainless steel/ FPM od EPDM

* for 07120, 07220 and 04350

FPM = Fluorine Rubber

Temperature specifications

Permissible storage temperature: –10 to +50 °C
Permissible ambient temperature: –10 to +40 °C

Temperature compatibility (medium temperature) of materials

Material:	Long-term at max. backpressure:	Short-term, max. 15 min. at max. 2 bar
PVT	65 °C	100 °C
SST	90 °C	120 °C
PPT	50 °C	100 °C
PCT	45 °C	60 °C

The specified temperatures (see above) can be exceeded temporarily, e.g. for sterilisation or flushing with hot water.

Air humidity: **< 92 % relative humidity, non-condensing**

Accuracy

Under constant conditions and in minimum stroke length of 30 % corresponding to following notes, the reproducibility of the metered quantity is better than ±2 %.

All specifications refer to metered quantities with water at 20 °C and correct installation of the metering pump.

3.1.2 Dimensions Sigma/ 2 S2Ba

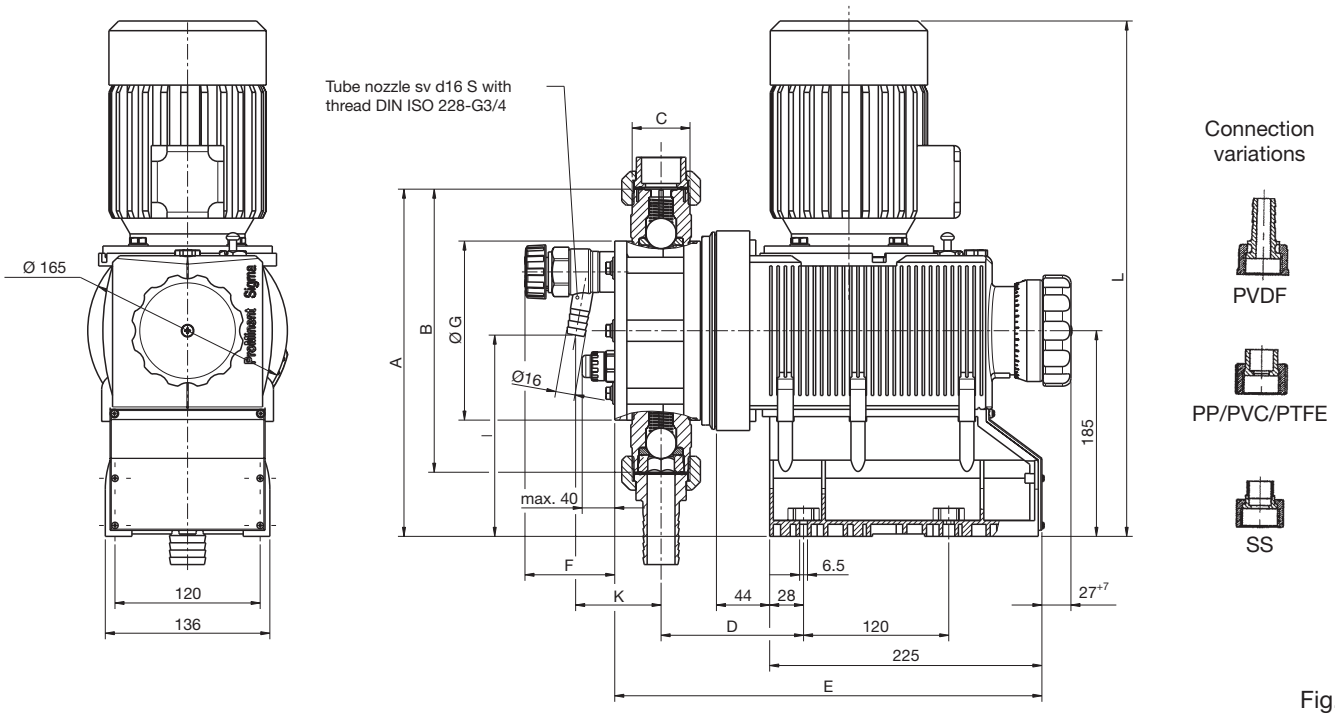

Fig. 12
61_01-101_00_27-73

Dimensions Sigma/ 2 (in mm)

Type	Connection	A	B	C	D	E	F	Ø G	I	K	L*
Sigma 04350, 07120, 07220 PVT	DN 25	287	234	G1 1/2"A	118	353	75	156	166	71	
Sigma 04350, 07120, 07220 SST	DN 25	287	233	G1 1/2"A	118	345	88	159	140	60	
Sigma 12050, 12090, 12130, 16050, 16090, 16130 PVT	DN 15	251	162	G1"A	111	341	72	122	148	63	
Sigma 12050, 12090, 12130, 16050, 16090, 16130 SST	DN 15	251	162	G1"A	110	330	88	122	122	53	

Höhe L der S2Ba in Abhängigkeit von der Motorausführung
(Maße in mm)

	Standard motor	1 phase motor	EExe-motor	EExde-motor	Motor variable speed	Motor with frequency inverter
Identcode-Merkmal	S	M, N	L1, P1	L2, P2	R	V0
L (in mm)	426	427	472	448	523	644

3.1.3 Dimensions Sigma/ 2 S2Ca

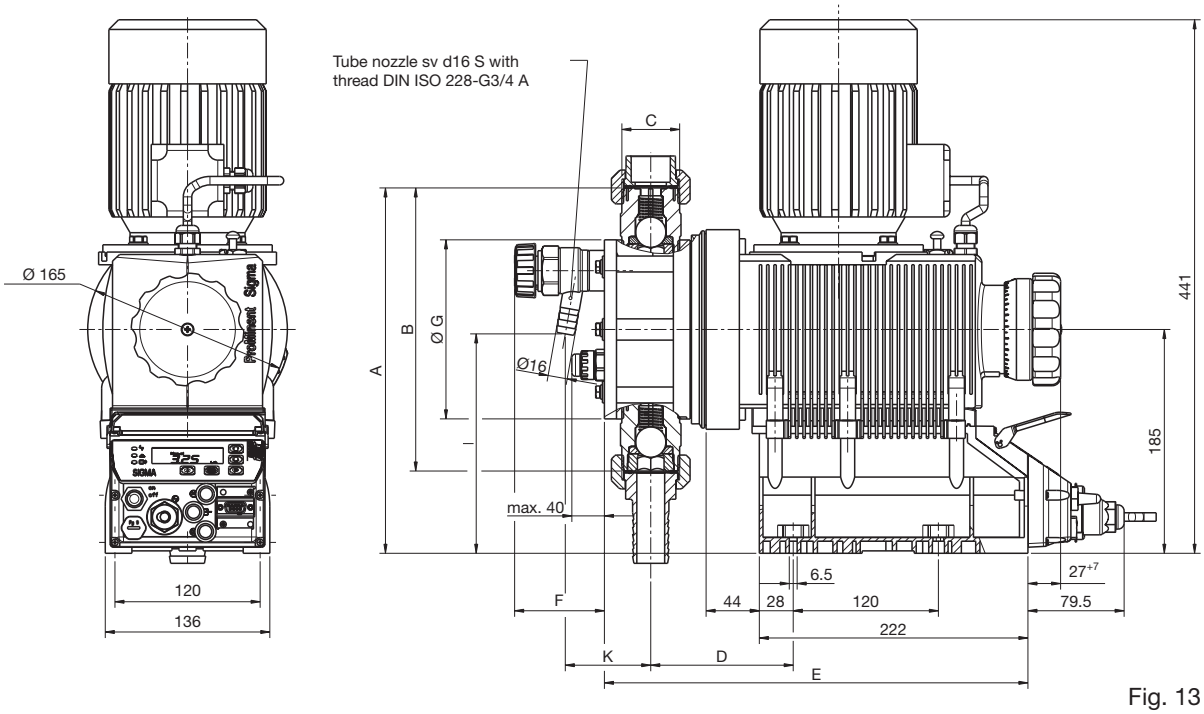

Fig. 13
61_01-101_00_32-73

Dimensions Sigma/ 2 (in mm)

Type	Connection	A	B	C	D	E	F	Ø G	I	K
Sigma 04350, 07120, 07220 PVT	DN 25	302	234	G1 1/2"A	118	350	75	156	181	71
Sigma 04350, 07120, 07220 SST	DN 25	302	233	G1 1/2"A	118	342	88	159	155	60
Sigma 12050, 12090, 12130, 16050, 16090, 16130 PVT	DN 15	266	162	G1"A	111	338	72	122	163	63
Sigma 12050, 12090, 12130, 16050, 16090, 16130 SST	DN 15	266	162	G1"A	110	327	88	122	137	53

3.1.4 Dimensions Sigma/ 2 S2Ba

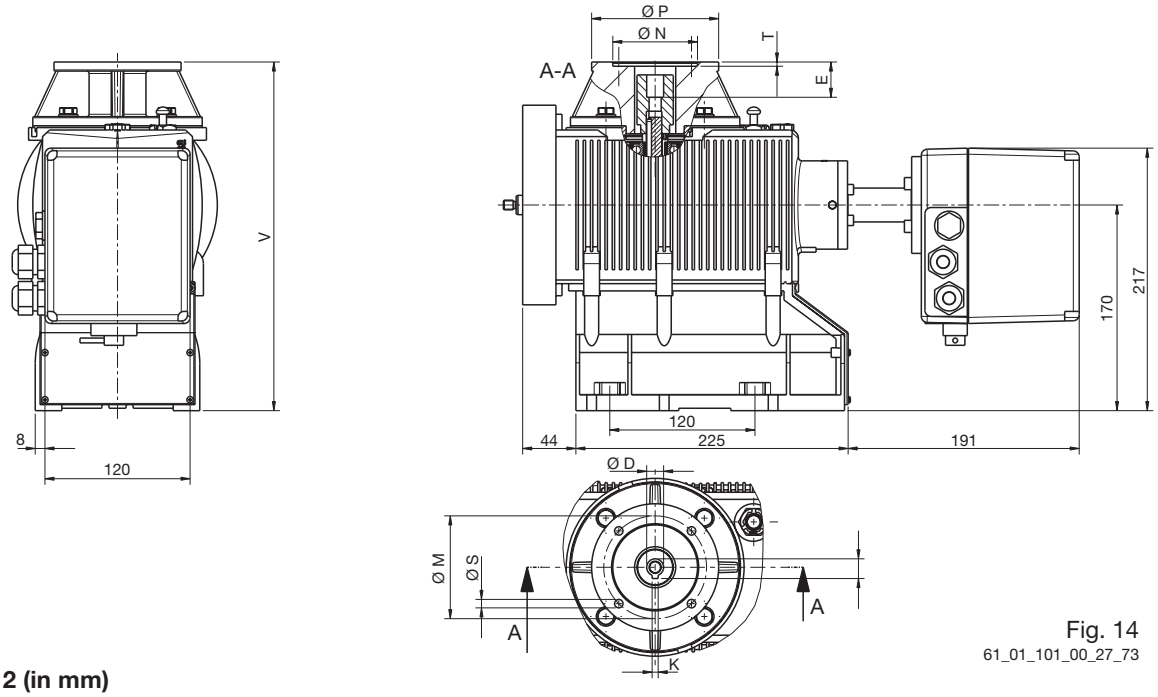

Fig. 14
61_01_101_00_27_73

Dimensions Sigma/ 2 (in mm)

Motor flange	Ø P	Ø M	Ø N	Ø S	Ø D	E	T	K	L	V
B 14/105	105	85	70	7	19	29	3,5	5	16,3	288
56 C/138	5.43″	5.88″	4.5″	0.43″	0.62″	1.14″	0.16″	0.2″	0.72″	12.2″
B 14/160	160	130	110	9	14	29	6	5	16,3	290
B 14/200	200	165	130	11	19	52,5	6	6	21,8	323
B 5/140*	140	115	95	9,5	11	26	3,5	4	12,8	230

* assembly without adapt flange direct on pump housing

3.1.5 Motor data

Electrical Data

Identcode characteristic		Rated voltage	System frequency	Rated power	
S	3 ph, IP 55	220-240 V/380-420 V	50 Hz	0.25 kW	
		250-280 V/440-480 V	60 Hz	0.25 kW	
M	1 ph AC, IP 55	230 V ±5 %	50/60 Hz	0.18 kW	
N	1 ph AC, IP 55	115 V ±5 %	60 Hz	0.18 kW	
L1	3 ph, II2GEEXeIIT3	220-240 V/380-420 V	50 Hz	0.18 kW	
L2	3 ph, II2GEEXdIICT4	220-240 V/380-420 V	50 Hz	0.18 kW	with PTC thermistor, speed adjustment range 1:5
P1	3 ph, II2GEEXeIIT3	250-280 V/440-480 V	60 Hz	0.18 kW	
P2	3 ph, II2GEEXdIICT4	250-280 V/440-480 V	60 Hz	0.21 kW	with PTC thermistor, speed adjustment range 1:5
R	3 ph, IP 55	230 V/400 V	50/60 Hz	0.37 kW	with PTC thermistor, speed adjustment range 1:20 with external fan 1 ph 230 V; 50/60 Hz
V0	1 ph, IP 55	230 V ±5 %	50/60 Hz	0.37 kW	variable speed motor with integrated frequency converter

For more details you can request the motor specification sheets. Custom motors and/or custom motor flanges are available on request.

WARNING

- **Only EX pump: Please thoroughly read the chapter “Important Additions for Metering Pumps in the EX Area” of the “General Operating Instructions ProMinent Motor Metering Pumps and Hydraulic Accessories”!**

direction of rotation

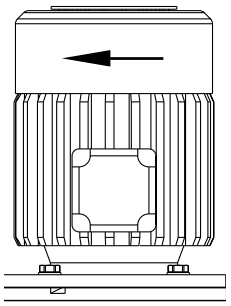

Fig. 15
S2Ba/S2Ca-026-D

Fuse data

IMPORTANT

- **The motors are not fuse-protected. Fit a motor circuit breaker!**
- **When connecting the motor, make sure that it rotates in the correct direction (see Fig. 11).**

Protection against accidental contact and moisture (IP)

Motor: IP 55 DIN EN 60034-5 (in accordance with DIN VDE 0470 Part 1, corresponds to EN 60529 and IEC 529).

Air humidity

Air humidity: maximum 90 % relative humidity, non-condensing.

External fan

Notes on the speed-controlled motor with separate fan and temperature monitoring may be found in the “General Operating Instructions ProMinent® Motor-Driven Metering Pumps and Hydraulic Accessories”.

3.1.6 Stroke actuator drive mechanism

230 V ± 10 %	50/60 Hz	11.7 W
115 V ± 10 %	60 Hz	11.7 W

3.1.7 Stroke adjuster drive mechanism

230 V ± 10 %	50/60 Hz	6.5 W
115 V ± 10 %	60 Hz	6.5 W

Cf. “Appendix” for terminal connection diagram.

3.1.8 Electrical data, stroke sensor “Sigma”

a) Reed contact (Identcode characteristic “Stroke sensor”: 2)

Pin 1 (white) = 4.5 V to 24 V, max. 10 mA
Pin 2 (brown) = OUT, open collector, 24 V, 20 mA
Pin 3 (green) = GND
Pulse width (low) ≥ 4 ms (depending on gearbox and power frequency)

Blue	-
Brown	+

b) Namur sensor, intrinsically (Identcode characteristic “Stroke sensor”: 3)

5-25 V DC, Namur type and/or DIN 19234, zero volt design.

Rated voltage: 8 V DC (R_i ~ 1 kΩ)

Power consumption:
Active surface, uncovered > 3 mA
Active surface, covered < 1 mA

Rated switching distance: 1.5 mm

The monitor/feeder must be capable of evaluating current changes in order to indicate diaphragm rupture!

WARNING

- **Only EX pump: Please thoroughly read the chapter “Important Additions for Metering Pumps in the EX Area” of the “General Operating Instructions ProMinent Motor Metering Pumps and Hydraulic Accessories”!**

IMPORTANT

- **Before commencing operation, install the provided diaphragm breakage sensor together with the gasket (Item159) and make the electrical connections.**
- **For safety reasons it is advisable to connect a safe low voltage (e.g. EN 60335-1 (SELV)).**

3.1.9 Electrical data, pacing relay “Sigma” (for the basic version)

Relay input

(power supply for the relay board)

Input voltage	Mains frequency	Power consumption
200/230 V AC (180-254 V)	50/60 Hz	10 mA (230 V/50 Hz)
100/115 V AC (90-134 V)	50/60 Hz	15 mA (115 V/60 Hz)
24 V DC (20-28 V)	-	10 mA at 24 V DC

Relay output

Voltage, max.	24 V DC
Current, max.	100 mA
Hook up duration Standard	100 ms adjustable

The contacts are zero volt.

3.1.10 Sound intensity level

The sound intensity level is
< 75 dB (A) for diaphragm liquid ends with ball valves and valve springs
< 70 dB (A) for all other liquid ends
at maximum stroke, maximum stroking rate, maximum back pressure (water) in accordance with DIN EN 12639 (noise measurement in fluid pumps)

Supplement for modified version

(For Identcode feature “Type“: “M modified“)

[Affix label with modified data here!]

4 Start-up/Maintenance

WARNING

- **For all metering pumps for metering inflammable media applies: Starting up and emptying only supervised by a competent person.**

IMPORTANT

Observe the safety notes provided in Section 1.

4.1 Start-up

All general guidelines in the accompanying "General operating instructions ProMinent® motordriven metering pumps and hydraulic accessories" apply.

WARNING

Only EX pump: Please thoroughly read the chapter "Important Additions for Metering Pumps in the EX Area" of the "General Operating Instructions ProMinent Motor Metering Pumps and Hydraulic Accessories"!

4.2 Maintenance

WARNING

- **Only EX pump: Please thoroughly read the chapter "Important Additions for Metering Pumps in the EX Area" of the "General Operating Instructions ProMinent Motor Metering Pumps and Hydraulic Accessories"!**
- **Only send the equipment for repair or maintenance in a cleaned condition and with the liquid end flushed. However, should any safety precautions be necessary even after careful draining and cleaning of the equipment, the required information must be listed in the Safety Declaration!**
  The Safety Declaration forms part of the inspection/repair contract.
  Maintenance or repair work will only be carried out if a Safety Declaration - correctly and fully completed by an authorised and qualified member of the Operator's staff - is available.
  A copy of the form is included in the "General operating instructions for ProMinent motor-driven dosing pumps and hydraulic accessories" or can be downloaded at www.prominent.com.

IMPORTANT

After loosening the liquid end screws (e.g. to change the valves or diaphragm), the screws must be retightened clockwise to the specified tightening torque.

What requires maintenance?

- Secure fit of liquid end screws.
- Secure fit of metering lines (intake and delivery sides).
- Secure fit of head valve and intake valve.
- Leakage hole at end disc for moisture (indicates possible diaphragm failure).
- Operate pump continuously for a short period of time in order to check whether it delivers correctly.

Maintenance intervals

General recommendation for maintenance intervals - every 3 months.

Shorter intervals are recommended if operated under load conditions (e.g. continuous operation).

The gear oil should be changed after approx. 5000 duty hours.

Gear oil ISO viscosity class VG 460, e.g. Mobil Gear 634,

ProMinent Order No. 555325 (Amount of oil approx. 0.5 l).

The metering diaphragm is a wearing part whose service life is dependent on following parameters:

- System backpressure.
- Operating temperature.
- Properties of medium to be metered.

The service life of the diaphragm is restricted in the case of abrasive media. In such cases, it is recommended to check the diaphragm more frequently and to install a diaphragm failure monitor.

4.3 Replacement of wearing parts

Replacing diaphragm (see exploded diagrams in appendix!)

WARNING

- **Only EX pump: Please thoroughly read the chapter "Important Additions for Metering Pumps in the EX Area" of the "General Operating Instructions ProMinent Motor Metering Pumps and Hydraulic Accessories"!**
- **Replacement of the diaphragm (see exploded view in the annex).**

IMPORTANT

- **Flush liquid end first in the case of hazardous media. For this purpose, force water or a suitable flushing agent through the intake connection of the liquid end with a wash bottle.**
- **In case of any replacement, genuine replacement parts are to be used!"**

▶ Set the stroke length to zero when the pump is running. Switch the pump off.

▶ Unscrew the diaphragm rupture sensor from the dosing head.

▶ Slacken the six screws from the dosing head and remove the dosing head with screws.

▶ Then release the diaphragm from the driving rod by jerking anti-clockwise and unscrew.

▶ Screw on the new diaphragm onto the driving rod until it has a tight fit.

▶ Install the dosing head with the screws so that the suction connector is pointing downwards (observe the flow direction / arrow marking on the valves).

▶ Screw the diaphragm rupture sensor into the dosing head.

▶ Switch on the pump.

▶ Adjust th e stroke length to 100 %, screw in the screws and tighten cross-wise with 7.5 ±0,5 Nm.

▶ Check the pump for leaks at max. pressure.

NOTE

The tightening torque of the liquid end screws should be rechecked after 24 hours of operation.

The tightening torques of the liquid end screws should be checked every 3 months for the PVT material version.

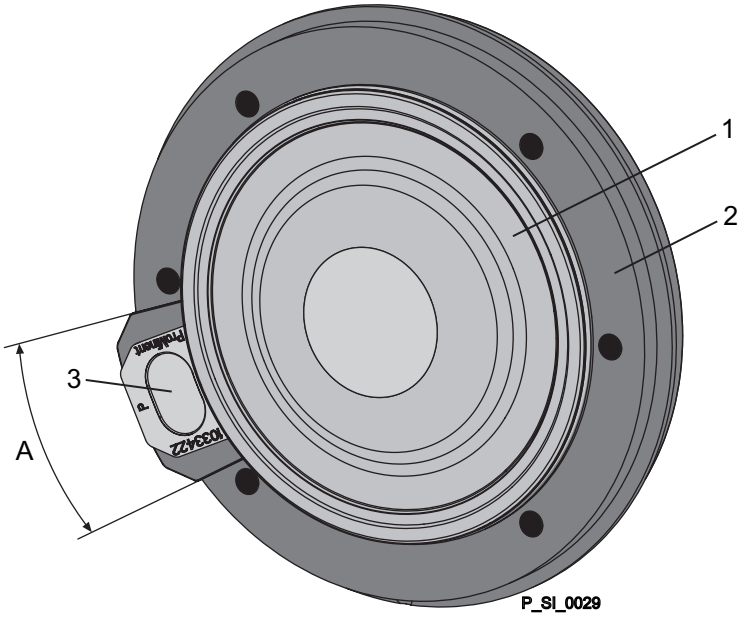

1 Diaphragm
2 Backplate
3 Clip
A Tolerance range

Fig. 16

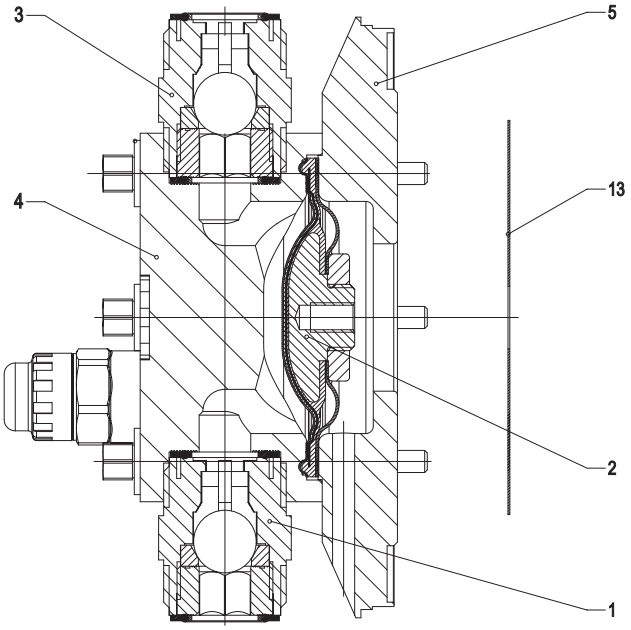

Fig. 17
61_05-103_00_73-03

GUIDELINE ON VALVE INSTALLATION

In the case of suction problems during installation, place the valves on a firm surface and tap the PTFE ball seat disk lightly with a brass rod and a hammer weighing about 300 g. Let the valves operate in the wet state.

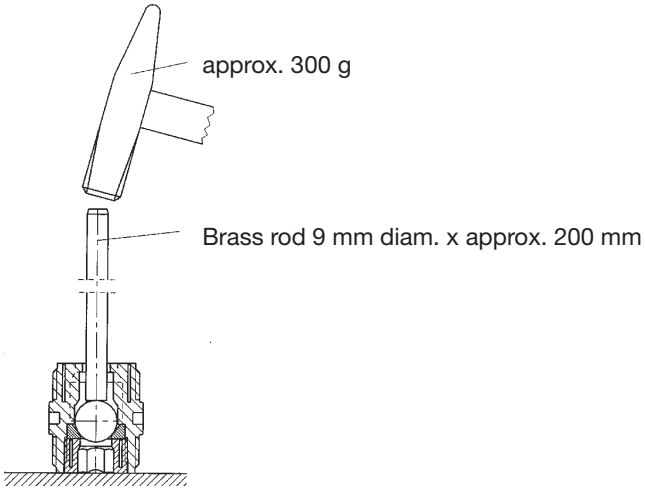

Fig. 15
S2Ba/S2Ca-019-D

NOTE

- **If suction problems with the pump or leakage at the overcurrent valve are encountered, first clean the ball and the ball seat disc.**
- **For media containing particles larger than 0.3 mm it is absolutely essential to install a filter in the suction line.**

5 Features of the S2Ca metering pumps

5.1 Function description, motors

The pump has an integrated electronic overload cut-out in all versions. This responds as soon as the maximum admissible power consumption is reached and stops the motor.

▶ If the motor stops due to a system overload the electronic controller detects the fault and transmits a message which is displayed on the display panel and at the pump.

▶ The fault signal can be cancelled by pressing the ”P“ key, altering the level for a brief period at the pause input (switch function) or by reconnecting the pump to the mains.

IMPORTANT

If the motor has been switched off via the electronic overload cut-out, check that the pump is not continuously overloaded.

NOTE

- **Sigma control pumps are fitted with a 3-phase WBS motor, but thanks to the internal microprocessor control, are connected directly to a 1-phase line voltage. The connection data of the pump below is therefore different to that of the motor (see chapters "Technical Data" - "Motor Data", "Identcode Feature" "S").**
- **The performance data in 3.1.1 are measured with the S2Ba (base model with 3-phase motor). If the S2Ba has been fitted with a 1-phase motor there may be up to 5 % speed reduction due to the different motor characteristic curve, i.e. corresponding 5 % reduced feed rate.**
- **The controller changes over to digital stroking mode at low stroke frequencies! This takes place at stroke frequencies below 1/3 of the maximum stroke frequency. This function is designed to ensure sufficient cooling of the motor and low stroke frequencies.**

Type: 100 – 230 V ± 10 %, 50/60 Hz

	at 100 V	**at 230 V**
nominal output	250 W	250 W
nominal current	3.2 A	2.0 A
peak current (in operation)*	10 A	5.5 A
making peak current	12 A	24 A
fuse, internal**	4.0 AT (1.5kA)	4.0 AT (1.5kA)

* internal switching
** Only genuine ProMinent fuses, item no. 732414, may be used!

5.2 Function description, controller

Operating modes

Operating modes are selected using the MODE menu (depending upon identcode, some operating modes may be absent).

"Analogue" operating mode: (Identcode, control variant: analogue)
The stroke rate is controlled via an analogue electrical signal via the "external control" terminal. Signal processing is pre-selected at the controller.

"Manual" operating mode:
The stroke rate is controlled manually via the controller.

"Contact" operating mode:
This operating mode offers the opportunity to make fine adjustments with small increase/ decrease factors. Dosing can be activated by a pulse via the "external control" terminal or by a semiconductor element. With the "pulse control" option it is possible to pre-set a feed quantity (batch) or number of strokes (factor 0.01 to 99.99) via the control unit.

"Batch" operating function:
This operating mode offers the option of working with larger transfer factors (up to 65535). Metering can be triggered by pressing the P key or a pulse from the "external control" terminal via a contact or semiconductor element. A batching quantity or number of strokes can be pre-selected via the control unit.

"PROFIBUS®" mode: (Identcode, control variant: PROFIBUS®)
This operating mode provides the option of controlling the pump via the PROFIBUS® (see "Supplementary instructions for ProMinent® gamma/ L and ProMinent® Sigma versions with "PROFIBUS®").

Functions

The following functions can be selected using the SET menu:

"Calibrate" function (Identcode, stroke length adjustment: manual + calibration):
The S3Ca can be operated in all operating modes including in calibrating mode. The corresponding continuous displays can show the actual feed quantity or the feed rate. Calibration is maintained within the stroke frequency range 0-180 strokes/ min. Calibration is also maintained when a stroke frequency is altered up to ±10 % scale divisions.

"Auxiliary frequency" function:
It is possible to set a stroke rate in the SET menu, which may be activated via the "external control" terminal. This auxiliary frequency overrides all other pre-set stroke rate frequencies.

"Flow" function:
Stops the S2Ca when the flow is insufficient. In the SET menu, the number of failed strokes is entered after which the pump will be turned off.

The following functions are available as standard:

“Float switch” function:
Information on the liquid level in the feed chemical container is transmitted to the S2Ca. This option requires the installation of a 2-stage float switch. This is connected to the “float switch” terminal.

“Pause” function:
The S2Ca can be stopped by remote control via the “external control” terminal. The “pause” function operates only via the “external control” terminal.

The following functions are activated by keystrokes:

“Stop” function:
The S2Ca can be stopped by pressing the STOP/START key without disconnecting from the mains power supply.

“Prime” function:
Priming (short term feed at maximum frequency) is activated by pressing both arrow keys at the same time (in “Stroke rate” permanent display).

Optional relay

The S2Ca has two connection options (not in PROFIBUS® version).

Optional “fault-indicating relay” or “power relay”:
In the event of fault signals, warning signals or float switch activation signals, connects an electrical circuit to trigger alarm sirens etc. The relay is retrofitted via an aperture in the power end.

“Fault indicating and pacing relay” option:
In addition to the fault indicating relay the pacing relay can make a contact with every stroke. The relay is retrofitted via an aperture in the power end.

Function and error indicators

The operating and error status is shown via the three LEDs and the “error” indicator on the LCD (see also section 9):

LCD indicator

If a fault occurs “error” will appear along with an additional fault warning.

LED indicator

Operating indicator (green)
This indicator is lit as long as the S2Ca is operating correctly. It goes out briefly with every stroke.

Warning indicator (yellow)
This warning light appears if the S2Ca electronics detect a situation that could lead to a fault, e.g. “liquid levels low 1st stage”.

Error indicator (red)
This warning light appears if a fault occurs, e.g. “liquid levels low 2nd stage”.

Hierarchy of operating modes, functions and fault statuses

The different operating modes, functions and fault statuses each have a differing effect on whether and how the S2Ca functions. These effects are given below:

1. **Prime**
2. **Fault, stop, pause**
3. **Auxiliary frequency**
4. **Manual, analogue, contact, batch**

i.e.

1. “Prime” can be activated in “Stroke rate” permanent display in any pump status (as long as it is operable)
2. “Fault”, “stop” and “pause” stop all system parts up to “prime”.
3. The stroke rate of the “auxiliary frequency” always overrides the stroke rates of the operating modes listed in point 4.

5.3 Sockets, symbols and wiring diagram

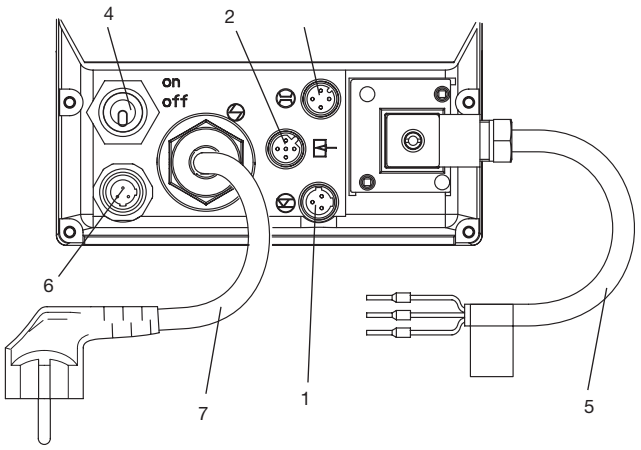

Fig. 16

(1) Socket for two-stage float switch with advance warning and de-activate function (with function plug*, not illustrated)

(2) External socket for contact or analogue controller with zero volts deactivation via pause function (with function plug* - not illustrated)

(3) Metering monitor socket for connection of ProMinent® metering monitor

(4) Mains switch (1-pin)

(5) Relay cable (fault indicating or pacing relay)

(6) Socket for diaphragm rupture sensor

(7) Mains lead with plug

*Must be plugged in unless cable attached.

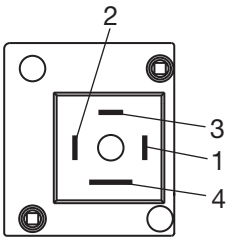

Technical data, relay (control version)

Pump type S2Ca

Relay	**Fault-indicating relay**	**Fault-indicating relay + pulse generator**	
Relay type	Fault-indicating relay	pulse generator	Fault-indicating relay
Voltage, max:	250 V 50/60 Hz	24 V DC	24 V 50/60 Hz
Current, max.	2 A (ohmic)	100 mA	100 mA
Hook up duration		100 ms	
Behaviour	see Identcode	see Identcode	see Identcode
Service life	> 200 000 cycles*	> 50 x 10^6 (10 V 10 mA)	> 200 000 cycles

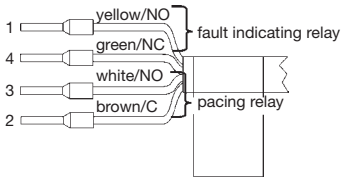

Relay type	Power relay
Voltage, max.	250 V (50/60 Hz)
Current, max.	16 A (ohmic)
Hook up duration	
Behaviour	see Identcode
Service life	> 30 000 cycles*

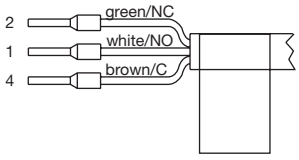

* in the case of nominal load

The contacts are zero volt.

N/C fault indicating relay - the relay closes immediately after the power is switched on and opens in the event of a fault.

N/O fault indicating relay, the relay closes in the event of a fault.

Use suitable interference suppression (e.g. RC glands) when connecting inductive loads.

Wiring diagram

View of cable connectors from front

Float switch cable

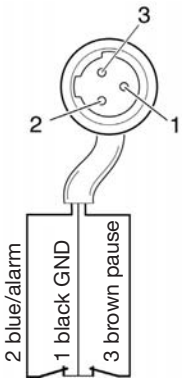

for

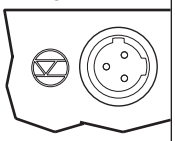

Blue and black open
-> alarm signal
Brown and black open
-> alarm signal + pump stops

Universal signal cable (5-core)

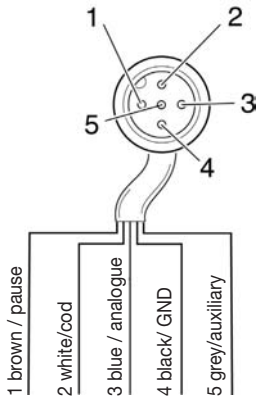

for

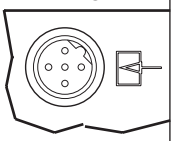

Pause function:
brown and black closed
-> pump metering

brown and black open
-> alarm + pump stopped

External/contact:
white and black closed
-> start contact for pump
(note pause function:
brown and black closed?)

Analogue:
blue, black
-> analogue output 0/4-20 mA
(note pause function:
brown and black closed?)

Auxiliary frequency:
grey and black closed
-> pump metering at pre-set stroking rate

➜ Circuit examples see p. 38

Metering monitor cable

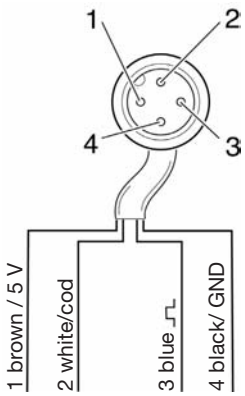

for

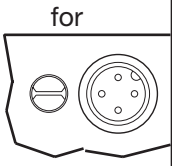

Diaphragm rupture cable

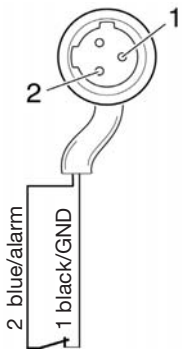

for

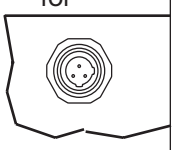

Contact open -> alarm
-> pump stops with controller type 0

External/contact cable (2 core)

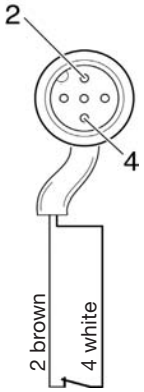

for

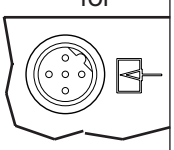

Contact closed -> metering stroke

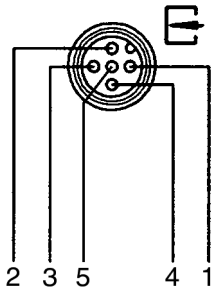

Technical data, external contact

Semi-conductor switch elements (e.g. transistors in open-collector circuits) or contactors (relays) with a residual voltage of -0.7 V can be used as input switch elements.

Controller type 0 (see identity code)

Pin 1 = Pause input (activating function)

Voltage at open contacts: approx. 5 V
Input resistance: 10 kΩ
Controller: – zero volts contact (approx. 0.5 mA)
– semi-conductor (residual voltage: < 0.7 V)

Pin 2 = Contact input

Voltage at open contacts: approx. 5 V
Input resistance: 10 kΩ
Controller: – zero volts contact (approx. 0.5 mA)
– semi-conductor (residual voltage: < 0.7 V)
Min. contact duration: 20 ms
Max. pulse frequency: 25 pulses/s

Pin 3 = unused

Pin 4 = GND

Pin 5 = Auxiliary input

Voltage at open contacts: approx. 5 V
Input resistance: 10 kΩ
Controller: – zero volts contact (approx. 0.5 mA)
– semi-conductor (residual voltage: < 0.7 V)

Controller type 1 (see identity code)

Pin 1 = Pause input (activating function)

Voltage at open contacts: approx. 5 V
Input resistance: 10 kΩ
Controller: – zero volts contact (approx. 0.5 mA)
– semi-conductor (residual voltage: < 0.7 V)

Pin 2 = Contact input (not active during analogue operation)

Voltage at open contacts: approx. 5 V
Input resistance: 10 kΩ
Controller: – zero volts contact (approx. 0.5 mA)
– semi-conductor (residual voltage: < 0.7 V)
Min. contact duration: 20 ms
Max. pulse frequency: 25 pulses/s

Pin 3 = Identical to input*

Input load: approx. 120 Ω

Pin 4 = GND

Pin 5 = Auxiliary input

Voltage at open contacts: approx. 5 V
Input resistance: 10 kΩ
Controller: – zero volts contact (approx. 0.5 mA)
– semi-conductor (residual voltage: < 0.7 V)

* The metering pump makes its first metering stroke at approx. 0.4 mA (4.4 mA) and starts continuous operation at approx. 19.2 mA.

Block circuit diagram S2Ca

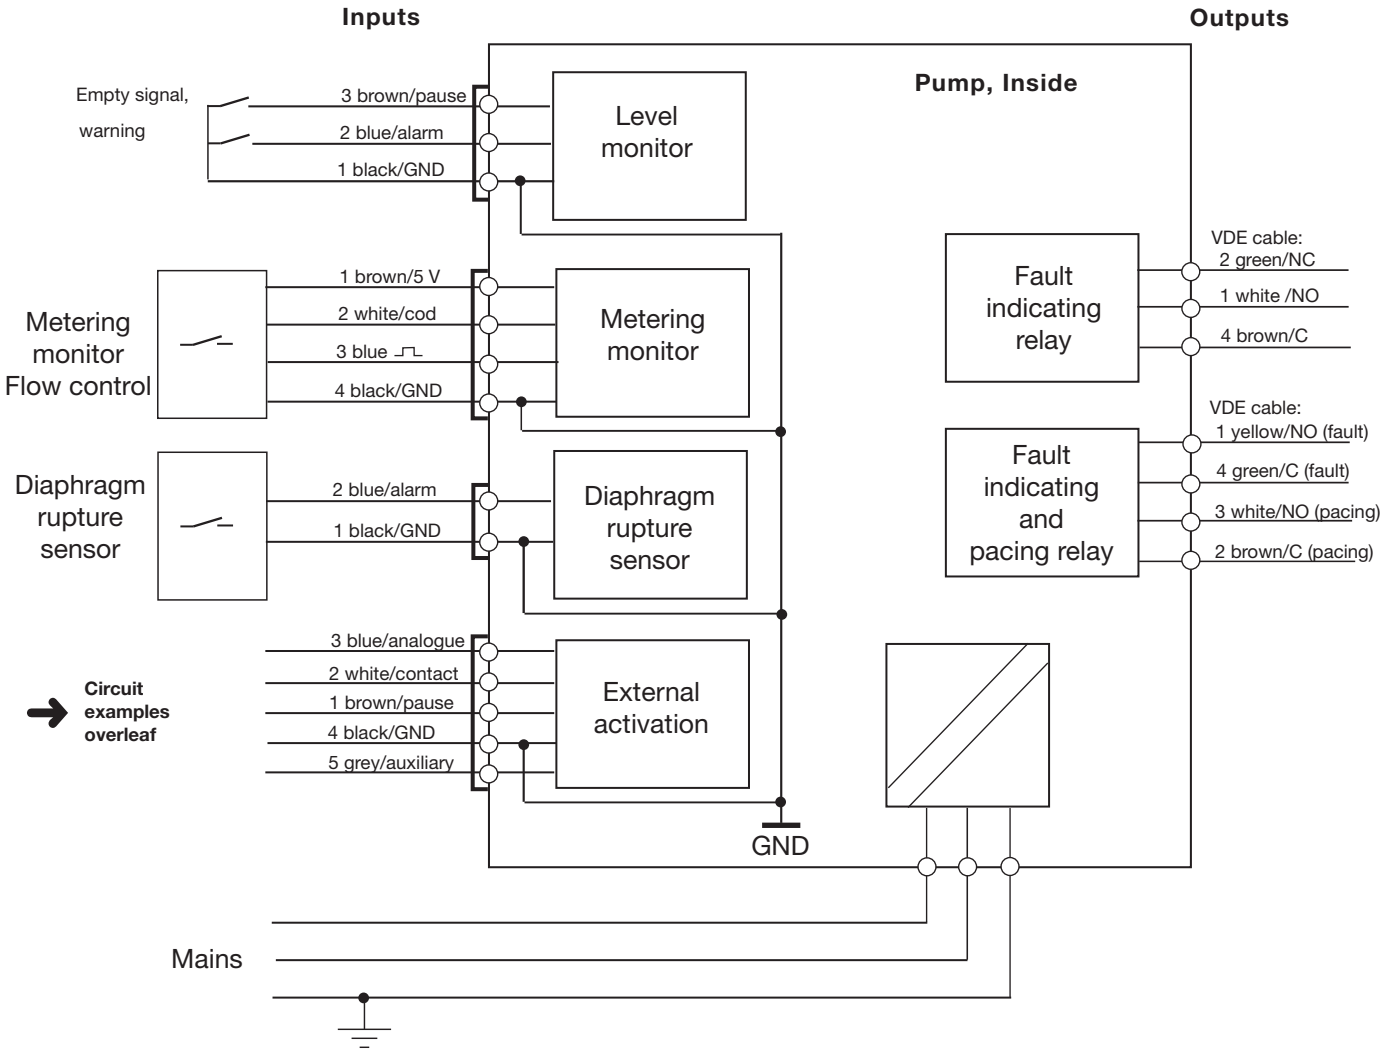

Circuit examples: universal signal cable

by customer **Cable** **Pump, inside**

"External contact" function
(ProMinent® external/contact cable)
two-core

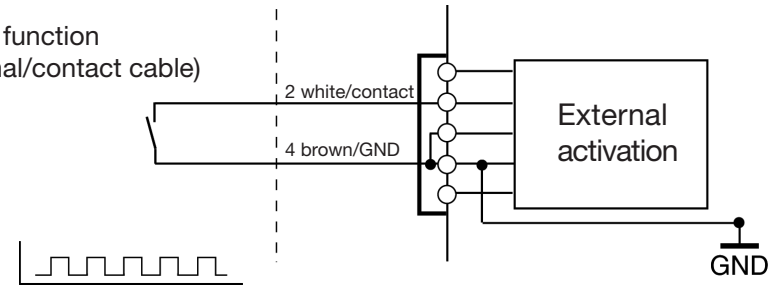

Pulse rate,
e.g. contact water meter

"External contact" function
(ProMinent® universal signal cable)
five-core

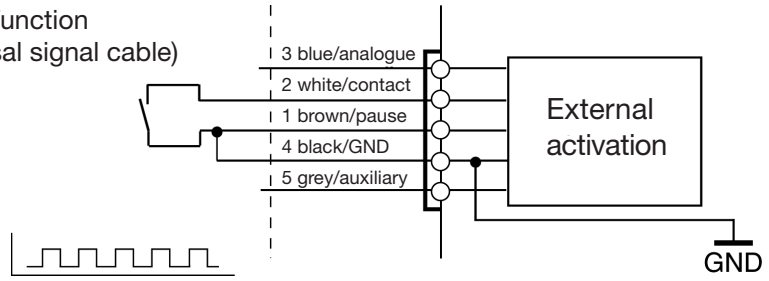

Pulse rate,
e.g. contact water meter

"Pause" function

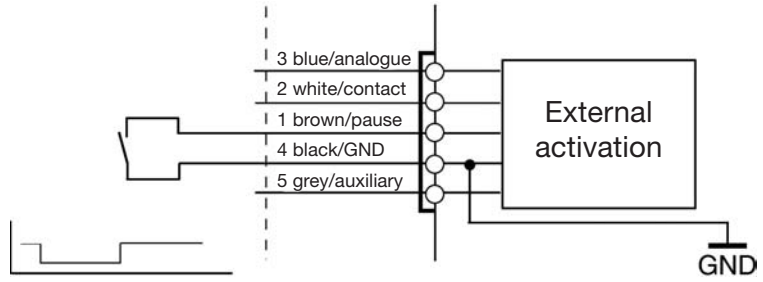

Permanent contact,
e.g. from control room

"Auxiliary frequency" function

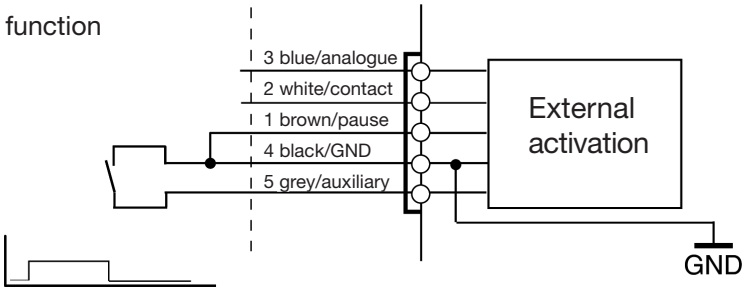

Permanent contact,
e.g. from control room

"External analogue" function

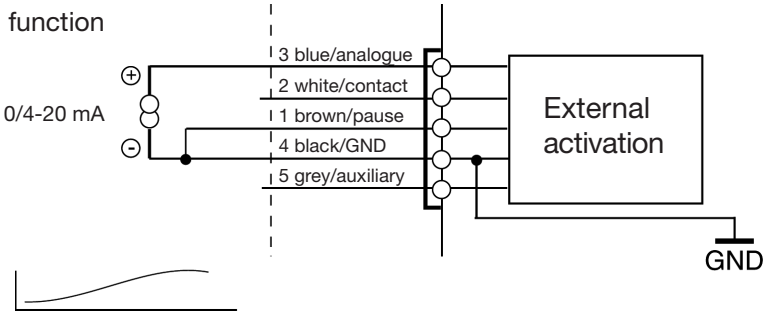

Analogue signal,
e.g. from magnetic inductive
flow meter

IMPORTANT

- **The universal signal cable, the external/contact cable and the level monitor cable should not be less than 1.20 m long, otherwise cable recognition will fail.**

5.4 Retrofitting relays

(not in PROFIBUS® version)

Delivery range:

1 relay circuit set with 2 screw fasteners
1 relay cable set with socket
1 seal

Press-out relay opening

WARNING

Disconnect the S3Ca from the mains power supply and rinse liquid end before commencing work (see section 10)!

IMPORTANT

When preparing the opening, ensure that the punch is not forced through the entire pump base!
Pump circuits may become damaged.

- ▶ Place the S2Ca on a firm surface with the relay opening press-out section at the top (see fig. 21)
- ▶ Place a punch (dia. 8-15 mm) in the centre of the relay opening press-out section, and strike briefly and sharply with a hammer (approx. 250 g)
- ▶ If necessary clean up the edges of the opening
- ▶ Remove the pressed out section from the S2Ca

Inserting the relay component

- ▶ Hold the relay component with your right hand gripping the left and right hand edges of the relay cover, and tilt the front end slightly to the left (see fig. 22)
- ▶ Push the relay component through the relay opening, holding the upper corner of the lower edge against the guide rail on the pump base, until the contact of the relay component has reached the controller contact. (test: can you still move the end of the circuit back and forth?)
- ▶ Gently push the relay component right into the opening
- ▶ Screw the relay cover firmly onto the housing using the screws provided
- ▶ Insert the relay cable plug seal into the relay cover and screw on the plug (see fig. 24)
- ▶ The pump is generally programmed ex-factory to ”drop-out action alarm relay“ and – if fitted – ”pull-up action clock pulse generator relay“. If a switching function is required, the pump can be reprogrammed at the Heidelberg plant (not necessary in PROFIBUS®-version).

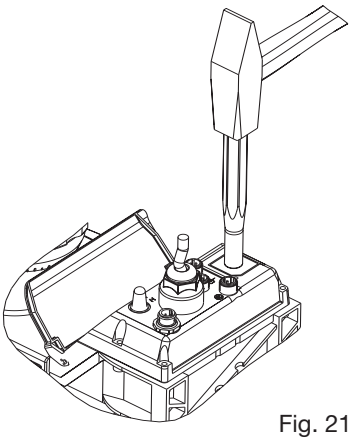

Fig. 21

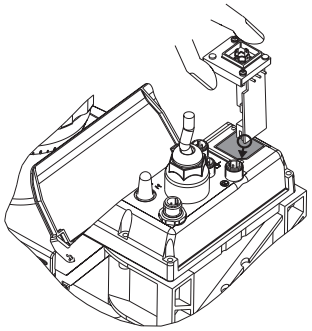

Fig. 22

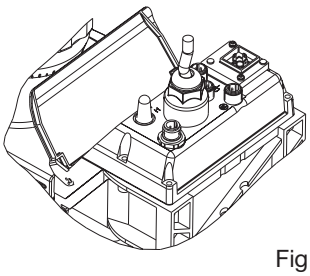

Fig. 21

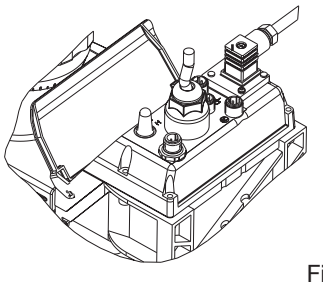

Fig. 24

6 Control elements

Please acquaint yourself with the S2Ca control elements with the help of the “control elements and key functions” overview!

Indicators The LCD display supports the operation and setting of the S2Ca with a range of indicators:

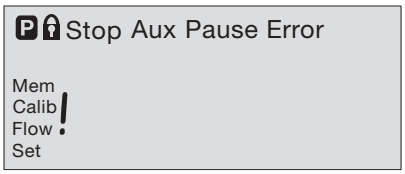

The indicators are interpreted as follows:

Symbol for P key:	The S2Ca is in settings mode.
Close symbol:	In a continuous display: lock (if code has been set). In settings mode: indicates access to code menu.
Stop:	The S2Ca has been stopped using the STOP/START key.
Aux:	The S2Ca is pumping at the auxiliary frequency. In AUX menu: the S2Ca is in the AUX menu.
Pause:	The S2Ca has been stopped using the “pause” function (external).
Error:	A fault has occurred and the pump has been stopped.
Mem:	An additional “memory” function has been set in the “contact” and “batch” operating modes. In CNTCT or BATCH menus (“mem” flashes): the memory function can be set.
Calib:	The S2Ca is in the CALIB menu. In a continuous display (“calib” flashes”): Deviation from the stroking rate from the value at the time of the calibration by more than 10 percent (e.g. in the case of a stroke length of 40% when it has been set to less than 30% or more than 50%).
Flow:	The S2Ca is in the FLOW menu.
Set:	The S2Ca is in the SET menu.
Exclamation mark:	The number of strokes reached is above the maximum value (99999) that can be shown in the LCD display.

NOTE

When calibrated, the S2Ca displays the feed rate and the feed capacity in l and/or in l/h or in gal and/or g/h.

7 Settings

NOTE

- **Open out the fold-out page following the title page fully! There you will find the overviews “control elements and key functions” and “operating settings diagram”.**
- **If no keys are pressed within a period of 1 minute, the S2Ca will return to a continuous display.**

Basic information for setting up the S2Ca

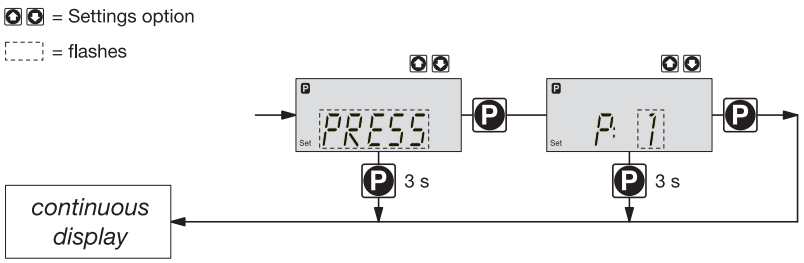

Confirm entries

Press the P key briefly;
you will automatically move to the next menu option or to a continuous display.

Exit menu option without confirming

Press the P key for 3 s:
The entry is cancelled and you will return to a continuous display.

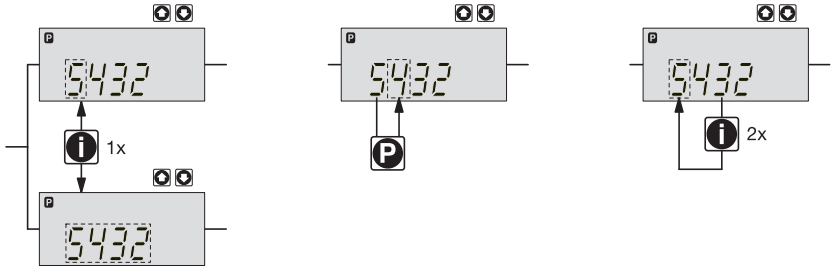

Incremental change of a value

Press the i key 1x;
you can toggle between altering the digits of a value (“change individual digits” = standard) or incremental alteration of a value (“change a figure”).

Change adjustable values

Press UP or DOWN arrow key;
The flashing digit or figure will start to increase or decrease incrementally.

Confirm adjustable values

For “change individual digits”: confirm each digit using the P key. When the last digit has been confirmed you will automatically move to the next menu option or to a continuous display.

For “change a figure”; press the P key 1x; you will simultaneously move to the next menu option or to a continuous display.

Correct wrongly set digits

Press the i key 2x;
you will go back to the first digit.

7.1 Check adjustable values

Before setting up the S2Ca you can check the current settings of adjustable values:

Press the i key (“i” as in “info”) when the S2Ca is in continuous display mode (There is no P key symbol in the LCD display).

Each time you press the i key you will see a different continuous display. The number of continuous displays depends upon the identity code, the selected operating mode and the connected accessories (see overview “continuous displays”).

7.2 Change to settings mode

If you hold down the P key for 2 seconds in any continuous display, the S2Ca will change to the settings mode.
If CODE 1 is set, the code must be entered after pressing the P key.

The following menu options appear first in the settings mode (see also overview “operating/ settings diagram”):

- MODE menu
- CODE menu (optional)
- SET menu
- CLEAR window

In order to adapt the S2Ca to your process requirements you must:

1. **Select the operating mode in the MODE menu.**
2. **If necessary enter the settings for this operating mode in the SET menu.**
   Exception: Timer and PROFIBUS®.

IMPORTANT

Note the diagram below!

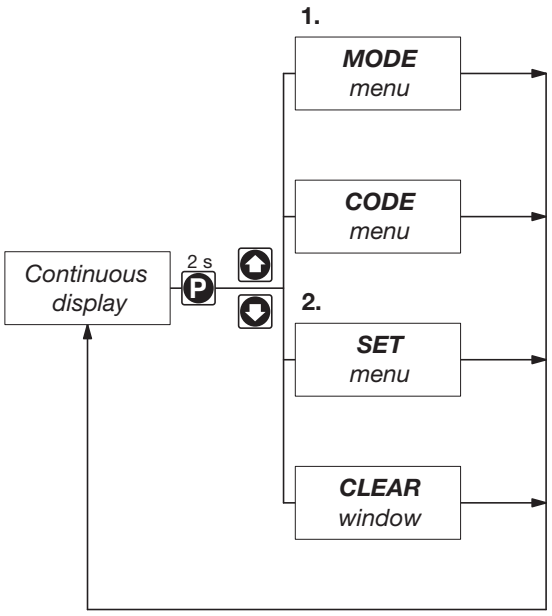

7.3 Select operating mode (MODE menu)

The following operating modes are selected via the MODE menu (depending upon identity code, some operating modes may be absent):

- Manual: for operation by hand
  (Identity code, control variant: manual, standard option)
- Analogue: for electronic control
  (Identity code, control variant: analogue current)

- Contact: for contact operation
  (Identity code, control variant: external 1:1 / external with pulse control)
- Batch: for batch operation
  (Identity code, control variant: external with pulse control)

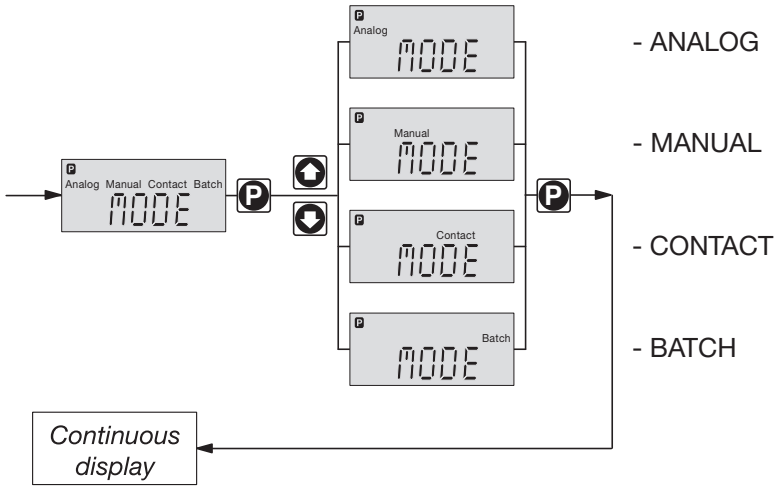

7.4 Settings for operating mode (SET menu)

NOTE

First select the operating mode in the MODE menu!
Exceptions: Timer and PROFIBUS®.

In the SET menu you can adjust various settings depending upon the selected operating mode.

The following programmable function settings menus appear in all operating modes:

- Calibrate (CALIB menu)
- Auxiliary frequency (AUX menu)
- Flow (FLOW menu, available only if flow monitor is connected)

See also section 7.5!

Further settings menus depend upon the selected operating mode.

7.4.1 Settings for “manual” operating mode

There are no other settings menus in the overall SET menu for the “manual” operating mode apart from those described in 7.5.

7.4.2 Settings for “analogue” operating mode (ANALG menu)

In addition to those settings menus described in 7.5, there is an additional ANALG menu in the overall SET menu for the “analogue” operating mode.

The stroke rate is controlled by an analogue electrical signal via the “external control” terminal.

You can select three signal-processing methods:

- 0 - 20 mA: at 0 mA the S2Ca does not operate
  at 20 mA the S2Ca operates at 180 max. strokelength
  Between these two extremes the stroke rate is proportional to the electrical signal.

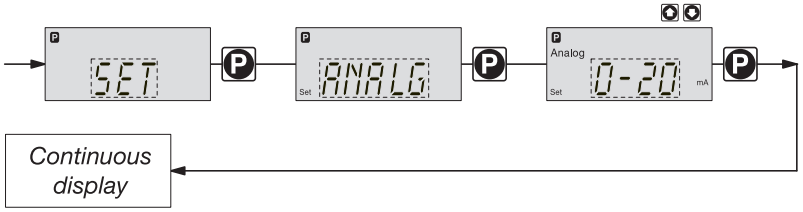

- 4 - 20 mA: at 4 mA the S2Ca does not operate
  at 20 mA the S2Ca operates at 180 max. strokelength
  Between these two extremes the stroke rate is proportional to the electrical signal.
  For signals of below 3.8 mA a fault will be detected and the S2Ca will stop (e.g. cable break).
- Curve: In the “curve” processing mode you can programme the S2Ca ratios.
  There are 3 options available:
  - ----- = straight line
  - --__ = lower band
  - __/-- = upper band

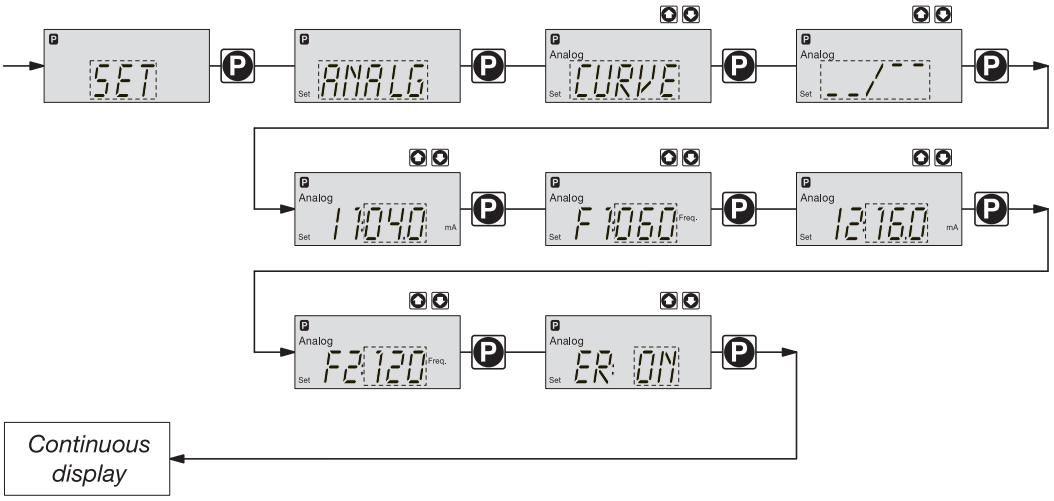

Straight line:

The following symbol appears in the LCD display: ----- .
You can enter any stroke frequency ratio for the S2Ca in proportion to the electrical signal. You must enter two points P1 (I1, F1) and P2 (I2, F2). F1 is the stroke rate at which the pump should operate at current I1: the straight line and the ratio are fixed accordingly:

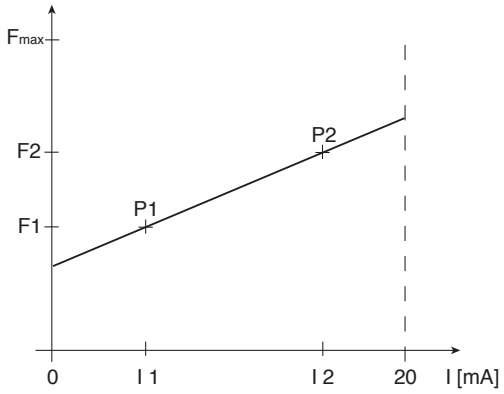

Fig. 25

NOTE

Draw a diagram like the one above - with values for (I1, F1) and (I2, F2) - in order to set the S2Ca to your required stroke rate!

Lower/upper band:

This processing mode allows you to control a pump via an electrical signal as shown in the diagrams below.

Lower band
e.g. Alkali pump

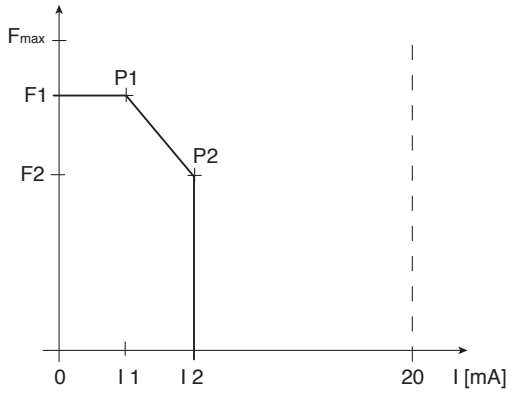

Fig. 26

Upper band
e.g. acid pump

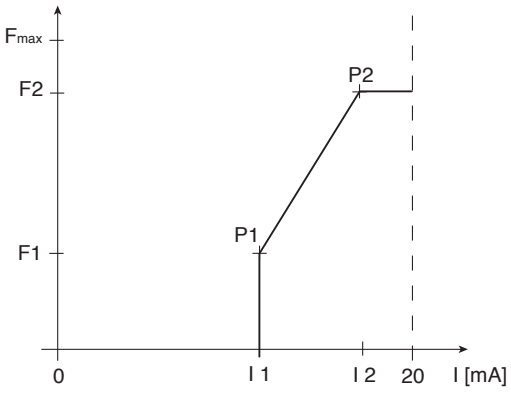

Fig. 27

Lower band:

The symbol appears in the LCD display. The S2Ca will operate below I1 at F1. Above I2, the S2Ca ceases to operate. Between I1 and I2 the stroke rate is between F1 and F2, proportional to the signal current.

Upper band:

The signal appears in the LCD display. The S2Ca will cease to operate below I1. Above I2, the S2Ca will operate at F2. Between I1 and I2 the stroke rate between is F1 and F2, proportional to the signal current.

The smallest processable difference between I1 and I2 is 4 mA.

Error processing

In the “ER” (error) menu option you can activate an error processing function for the “curve” mode. An error message appears for signals below 3.8 mA and the S2Ca stops.

7.4.3 Settings for “contact” operating mode (CONTCT menu)

In addition to those settings menus described in 7.5, there is an additional CONTCT in the overall SET menu for the “contact” operating mode.

The operating mode “contact” allows you to activate a single stroke or a series of strokes. The strokes can be activated by a pulse or via the “external control” terminal. This operating mode is intended to transfer input pulses into a reduction (fraction) or small increase in strokes.

IMPORTANT

The factor resets to “1” if you change to a different operating mode.

In the “contact - identity code: external with external pulse control” you can enter the number of pulses after which a stroke should be carried out. “Contact - identity code: external with external pulse control” is intended for small dosing quantities.

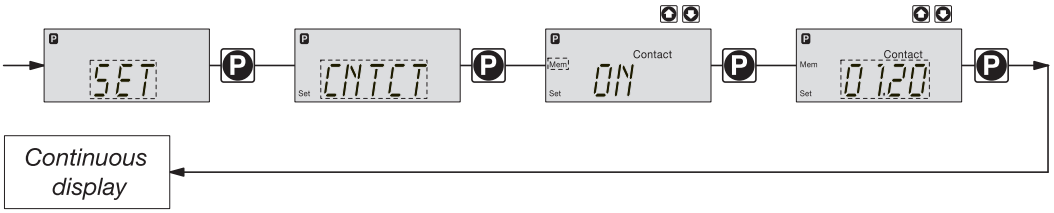

The number of strokes per pulse depends upon the factor, which you can enter. This allows you to vary to a certain extent the input pulses by a factor of 1.01 to 99.99 and/or reduce by a factor of 0.01 to 0.99:

“Number of strokes activated = factor x number of input pulses”

Examples

	Factor	Pulse (sequential)	Stroke number (sequential)
Increase	1	1	1
	2	1	2
	25	1	25
	99.99	1	99.99
	1.50	1	1.5 (1 / 2)
	1.25	1	1.25 (1 / 1 / 1 / 2)
Reduction	1	1	1
	0.50	2	1
	0.10	10	1
	0.01	100	1
	0.25	4	1
	0.40	2.5 (3 / 2)	(1 / 1)
	0.75	1.33 (2 / 1 / 1)	(1 / 1 / 1)

Explanation of increase

At a factor of 1	For every 1 pulse, 1 stroke is activated
At a factor of 2	For every 1 pulse, 2 strokes are activated
At a factor of 25	For every 1 pulse, 25 strokes are activated

Explanation of decrease

At a factor of 1	After 1 pulse, 1 stroke is activated
At a factor of 0.5	After 2 pulses, 1 stroke is activated
At a factor of 0.1	After 10 pulses, 1 stroke is activated
At a factor of 0.75	After 2 pulses, 1 stroke is activated, then after 1 pulse, 1 stroke is activated, then after 2 pulses, 1 stroke is activated etc.

NOTE

If a remainder occurs when the factor is processed, the S2Ca counts up the remainder values. When the sum reaches or exceeds “1” the S2Ca will activate a stroke. This ensures that the stroke number corresponds exactly to the factor throughout the dosing operation.

The number of input pulses which have not been processed are stored by the S2Ca in the stroke memory. The stroke buffer is limited to the batch size when memory is not activated (- with “Memory” at 65535 stokes). You can delete it by switching to a different operating mode.

You can optimally adapt the S2Ca to the respective process, e.g. in connection with contact water meters.

“Memory” extension function

The “memory” extension function can be optionally activated (“mem” appears in the LCD display). When “Memory” is activated the S2Ca adds any strokes which could not be carried out up to the maximum capacity of the stroke buffer – 65535 strokes. If this maximum capacity is exceeded the pump will register a fault.

7.4.4 Settings for “batch” operating mode (BATCH menu)

In addition to those settings menus described in 7.5, there is an additional BATCH menu in the overall SET menu for the “batch” operating mode.

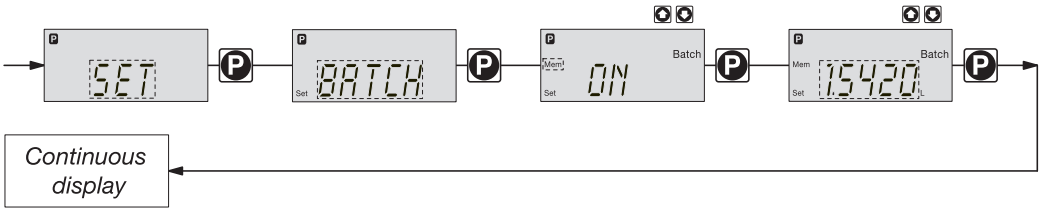

The “batch” operating mode is a variant of the “contact” operating mode (see 7.4.3).
You can pre-select a stroke number (no breaks, whole numbers only from 1 to 65535) as well as a feed quantity (batch). To switch between entries for “stroke number” and “feed quantity” press the i key 1x in the corresponding menu option (see also overview “operating/settings diagram”, fold-out page).
The “batch” operating mode is intended for large dosing quantities.

Metering can be actuated by pressing the P-key or via a pulse from the “external control socket”.

The number of input pulses which have not been processed are stored by the S2Ca in the stroke memory. The stroke buffer is limited to the batch size when memory is not activated (- with “Memory” at 65535 stokes). You can delete it by switching to a different operating mode.

“Memory” extension function

The “memory” extension function can be optionally activated (“mem” appears in the LCD display). When “Memory” is activated the S2Ca adds any strokes which could not be carried out up to the maximum capacity of the stroke buffer – 65535 strokes. If this maximum capacity is exceeded the pump will register a fault.

7.5 Settings for programmable functions (SET menu)

The following programmable function settings menus appear in all operating modes:

- Calibrate (CALIB menu)
- Auxiliary frequency (AUX menu)
- Flow (FLOW menu, available only if flow monitor is connected)

7.5.1 Settings for “calibration” function (CALIB menu)

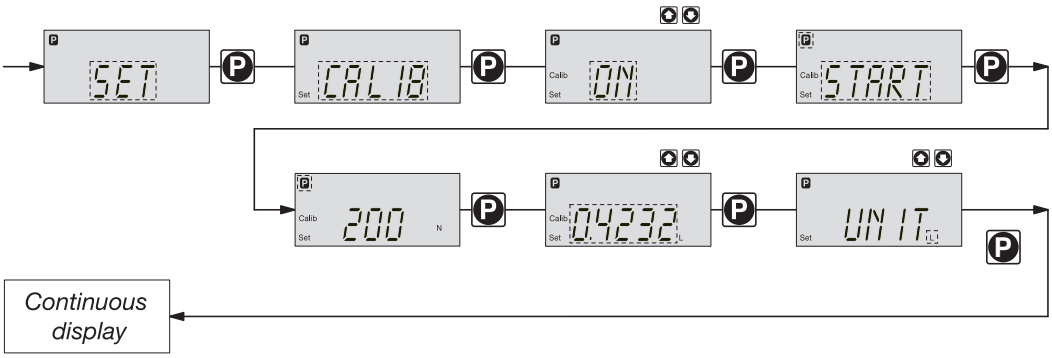

The S2Ca can also run in calibration mode. The corresponding continuous displays show the current dosing quantities or the feed rate.

The calibration is retained in the event of a change of the set stroke length by up to ±10 scale rates percent (if the stroke length is set to 40 % the range is 30 % to 50 %). If the stroke length is changed by more than ±10 scale rates percent the yellow warning light lights up, the permanent display flashes and the flashing “Calib” indicator appears.

NOTE

- **Do not go below 30 % stroke length (SEK type: 50 %).
  This will significantly affect accuracy of calibration.**
- **Calibration becomes increasingly accurate the more strokes made by the S2Ca during calibration (recommended: at least 200 strokes).**

WARNING

If using a hazardous feed chemical, the following setting instructions ensure adequate safety precautions are taken!

Calibration

- ▶ Insert the suction tube into a measuring cylinder containing the feed chemical - the discharge tubing must also be correctly installed (operating pressure,…!)
- ▶ Suck up the feed chemical (press both arrow keys at the same time) when the suction tube is empty
- ▶ Note the liquid level in the measuring cylinder and the stroke length
- ▶ Select the CALIB menu and go the first menu option using the P key
- ▶ Select “ON” using an arrow key and change to the next menu option using the P key
- ▶ To commence calibration, press the P key. The S2Ca starts to pump and displays the number of strokes (“STOP” appears at regular intervals)
- ▶ After a sufficient number of strokes, stop the S2Ca with the P key
- ▶ Calculate the dosed quantity (difference between the original quantity and the quantity remaining)
- ▶ Enter this quantity in the next menu option and then change to the following menu option by pressing the P key.
- ▶ Select the unit (“L” or “gal”) in the “UNIT” menu with an arrow key and push the P-button.

The S2Ca is calibrated.
The corresponding continuous displays show the calibrated values.
The total stroke number and total litres are set during calibration to “0”.
The S2Ca is in the STOP status.

7.5.2 Settings for “auxiliary frequency” function (AUX menu)

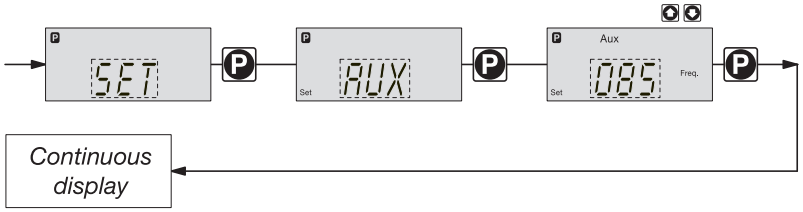

The programmable function “auxiliary frequency” allows switching to a different stroke frequency, which can be set in the AUX menu. It can be activated via the “external control” terminal. When the auxiliary frequency is activated, “aux” appears in the LCD display.

This auxiliary frequency overrides the current stroke frequency set for the selected operating mode.

7.5.3 Settings for the “flow” function (FLOW menu)

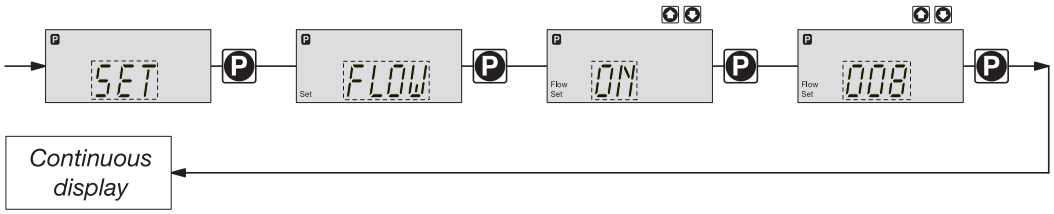

The flow menu only appears when a dosing monitor is connected to the “dosing monitor” terminal. This dosing monitor registers each discharge stroke of the S2Ca at the discharge connector and transmits it back to the S2Ca. If this response transmission is serially omitted for a period set in the FLOW menu (due to failure or below-minimum dosing) the S2Ca stops.

7.6 Setting code (CODE menu)

The code menu is used to select whether you want to prevent access to parts of the settings options.

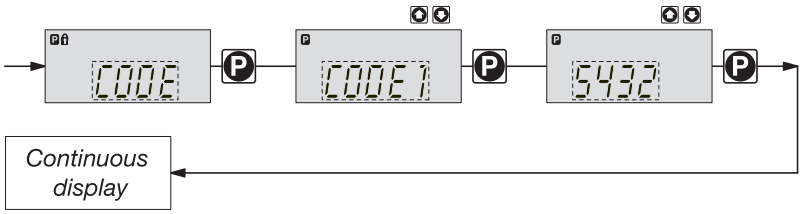

In the first menu option you can choose CODE 1 or CODE 2 (both use the same number).

- Select CODE 1 to prevent access to the settings mode (¿ in the overview “operating/settings diagram”, fold-out page). In the next menu option, enter the number you wish to use as the code.
- Select CODE 2 to prevent access to the settings options for directly alterable values in the continuous displays (¡ in the overview “operating/settings diagram”, fold-out page). In the next menu option, enter the number you wish to use as the code.
- Select NONE to remove a pre-set security lock.

7.7 Cancel total stroke number or total litres (CLEAR window)

In the CLEAR window you can delete the stored total stroke number and simultaneously the total litres (= set to “0”). You may then press the P key briefly to exit this window.

The values displayed are counted incrementally from the point of commissioning the pump, or from the last delete action.

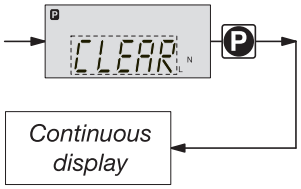

8 Operating

WARNING

- **Only EX pump: Please thoroughly read the chapter “Important Additions for Metering Pumps in the EX Area” of the “General Operating Instructions ProMinent Motor Metering Pumps and Hydraulic Accessories”!**

This section describes all operating options available to you when the S2Ca is in continuous display mode (no P key symbol in the LCD display).

NOTE

- **Open out the fold-out page following the title page fully! There you will find the overviews “control elements and key functions” and “operating/settings diagram”.**
- **Look at the overview “continuous displays”. This page shows you which displays are available in which operating mode, and which values are directly alterable in the corresponding continuous displays.**

8.1 Manual operation

Set stroke length

Stroke length is continually adjustable within a range of 0-100 %. The recommended stroke length range, which will practically guarantee technical reproducibility, is 30-100 % (SEK type: 50-100 %).

NOTE

At low stroking rates (less than 1/3 maximum stroking rate) the controller switches to digital stroking mode. This ensures adequate cooling of the motor at low stroking rates.

The following operating options are available via the different keys (see also figure on the next page):

Stop/Start S2Ca

To stop S2Ca: press STOP/START key.
To start S2Ca: press STOP/START key.

Start batch

Press the P key briefly in “batch” operating mode.

Load factory settings

Press the P key for 15 s to load factory calibration settings!
Current settings will be deleted.

Change to settings mode

When you press the P key for 2 s in any continuous display the S2Ca will change to settings mode (see section 7).
If CODE 1 is set, the code must be entered after pressing the P key.

Check adjustable values

Each time you press the i key you will see a different continuous display. The number of continuous displays depends upon the identity code, the selected operating mode and the connected accessories.

Change directly alterable values

To change a value (see below) directly in the corresponding continuous display, press one of the arrow keys until “set” appears in the LCD display. The delay has been programmed in to prevent inadvertent changing of values.

If CODE 2 has been set, this code must be entered after pressing the arrow key.

Directly alterable values are as follows:

Stroke rate

In “manual”, “contact” and “batch” operating modes:
The stroke rate can be altered in the “stroke rate” display.

Feed rate

In “manual” operating mode
The feed rate can be altered in the “feed rate” display.

Factor

The factor is the number of strokes activated by an external pulse or a press of the P key (in “batch” mode only).

In “Batch” operating mode:
You can alter the factor from the “remaining strokes” display.
The S2Ca returns to the original continuous display a few seconds after the factor has been reset.

Display program version

Press the P key for 10 seconds to display the program version.
Example: “V1052” + “X1010”.
In the case of “LOAD3” release the key immediately!

Batch size In “batch” operating mode:
The batch size can by changed from the “batch size/remaining litres” display.
The S3Ca returns to the original continuous display a few seconds after the batch size has been reset.

Priming The “priming” function is activated by pressing both arrow keys at the same time (in “Stroke rate” permanent display).

Cancel error Error messages are cancelled by pressing the P key briefly.

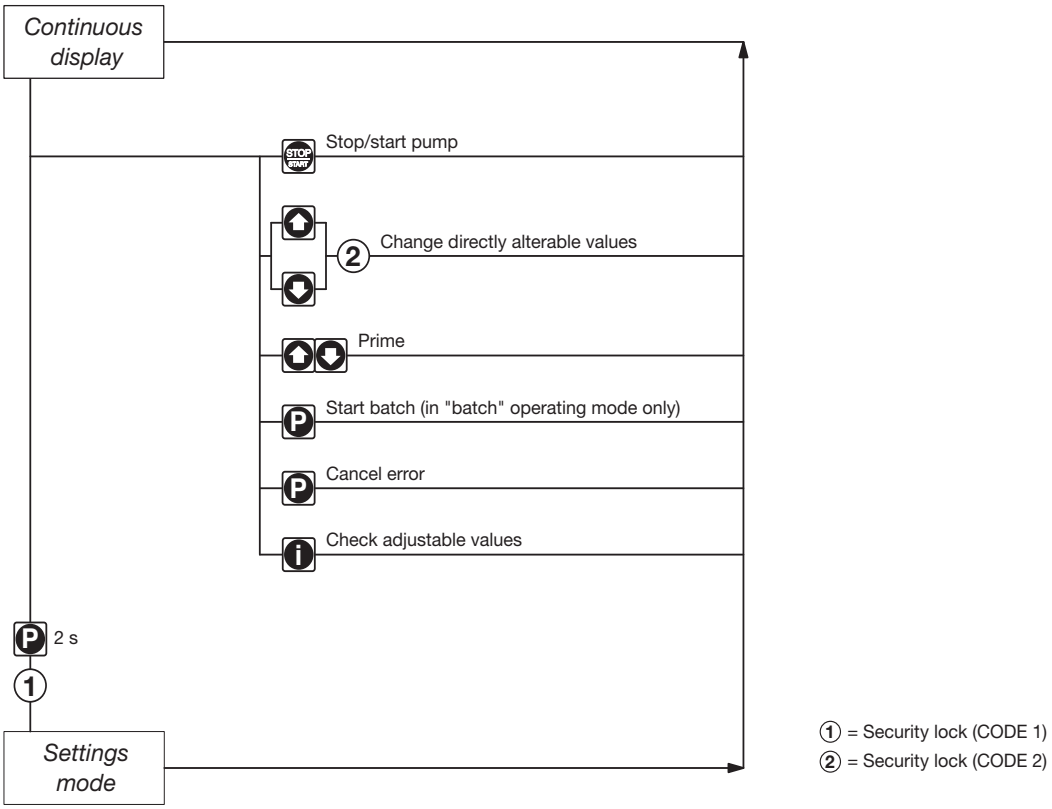

8.2 Remote control

Remote control of the S2Ca is possible via a control cable or PROFIBUS® (see Section 5.3 and Chapter 7, ”Supplementary instructions for ProMinent® gamma/ L and ProMinent® Sigma versions with PROFIBUS®“ as well as your documentation in the annex).

9 Troubleshooting

WARNING

- **Only EX pump: Please thoroughly read the chapter “Important Additions for Metering Pumps in the EX Area” of the “General Operating Instructions ProMinent Motor Metering Pumps and Hydraulic Accessories”!**
- **Always take suitable precautions when using hazardous chemicals!**
- **Ensure the equipment is de-pressurised before working on the pump!**

Pump primes despite completed stroke action and no venting

Cause Crystalline deposits on the ball seat because valves have dried out.

Remedy
- ▶ Remove the suction sleeve from the chemical supply container and rinse out the liquid end thoroughly.
- ▶ If still unsuccessful, dismantle valves and clean.

Fluid is seeping from the top plate

Cause The liquid end is not sealed against the pump diaphragm.

Remedy
- ▶ Tighten screws in the liquid end.
- ▶ If unsuccessful, replace the diaphragm (see section 4.3).

Green LED indicator (operating display) is not lit

Cause Incorrect or no mains voltage.

Remedy
- ▶ Use the recommended mains voltage as given in the voltage specification on the nameplate.

Error Messages

Red LED display is lit, “Error” and “MINIM” flash in the display

Cause Fluid level in the chemical storage tank has reached “liquid level low, stage 2”.

Remedy
- ▶ Fill the chemical supply container.

Red LED display is lit, “Error” and “ANALG” flash in the display

Cause S2Ca is in “analogue” operating mode, a fault routine has been programmed in the ANALG menu and the operating current has fallen below 3.8 mA.

Remedy
- ▶ Remedy low operating current.
- ▶ Switch fault routine “OFF” (see section 7.4.2.).

Red LED display is lit, “Error” and “CNTCT” flash in the display

Cause S2Ca is in “contact” or “batch” operating mode and the extended function “memory” has been set.
In addition a very large factor has been entered, too many contacts have been input or the P-key has been pressed too often, resulting in an overflow of the stroke memory.

Remedy
- ▶ Press the P-key, saved data will be deleted.
- ▶ Change S2Ca set up.

Red LED display is lit, “Error” and “FLOW” flash in the display

Cause Dosing monitor not properly connected.

Remedy
- ▶ Connect dosing monitor properly.
- ▶ Press P-key.

Cause Dosing monitor has reported more defective strokes than have been set in the FLOW menu.

Remedy
- ▶ Press P-key.
- ▶ Investigate the cause and remedy.

Red LED is lit. “Error” appears in the display and “MOTOR” is flashing

Cause The motor is not operating accurately because the backpressure is too high.

Remedy
- ▶ Reduce backpressure.
- ▶ Press the P key (reset key).

Cause The motor is overheating.

Remedy
- ▶ Check ambient temperature (max. 40 °C).
- ▶ Allow motor to cool down.
- ▶ Press the P key (reset key).

Cause Other motor fault.

Remedy
- ▶ Call ProMinent.
- ▶ Press the P key (reset key).

Red LED is lit. “Error” appears in the display and “TEMPERATURE” is flashing

Cause The temperature in the pump housing is too high because the ambient temperature is too high.

Remedy
- ▶ Reduce ambient temperature.
- ▶ Allow motor to cool down.
- ▶ Press the P key (reset key).

Cause The temperature in the pump housing is too high because the pump is consuming too much power.

Remedy
- ▶ Check installation, rectify if necessary.
- ▶ Allow motor to cool down.
- ▶ Press the P key (reset key).

Red LED is illuminated, the display shows “Error” and “DIAPH” flashes.

Cause Metering diaphragm is fractured.

Remedy
- ▶ Replace metering diaphragm according to chapter 4.3

Red LED display is lit, “Error” appears in the display and “FAN” is flashing

Cause Fault related to fan in pump housing.

Remedy
- ▶ Check fan and replace if necessary.
- ▶ Press the P key (reset function).

Red LED display is lit, “Error” appears in the display and “SYSTEM” is flashing

Cause Controller fault.

Remedy
- ▶ Disconnect the pump from the mains and reconnect.
  If the error message continues, send the pump back to ProMinent.

Red LED lights up, “Error” appears in the display and “Menu” flashes.

Cause Stroke buffer full

Remedy
- ▶ Rectify fault
- ▶ Press P key (Make a note of what effect this has on your process).

All other Errors

Please contact your ProMinent branch or representative!

Fault Signals

Yellow LED display is lit

Cause Liquid level in chemical storage tank has reached “liquid level low, stage 1”.

Remedy
- ▶ Fill chemical storage tank.

Yellow LED Display is lit and “calib” flashes

Cause The pump is calibrated and the stroke length deviates by more than ±10 % from the value at the time of calibration.

Remedy
- ▶ Reset the stroke length or calibrate the pump again to the desired stroke length.

10 Decommissioning and disposal

Decommissioning

WARNING

- **Only EX pump: Please thoroughly read the chapter “Important Additions for Metering Pumps in the EX Area” of the “General Operating Instructions ProMinent Motor Metering Pumps and Hydraulic Accessories”!**
- **When decommissioning the pump, ensure that all dirt and chemicals are cleaned from the housing and particularly the liquid end.**
- **Always take suitable precautions when using hazardous chemicals!**
- **Ensure that the equipment is de-pressurised!**

- ▶ Disconnect the pump from the mains.
- ▶ Empty the liquid end by placing the pump on its head and allowing the chemical to drain out.
- ▶ Rinse the liquid end with a suitable material, thoroughly rinse the liquid end after use with hazardous materials!

If decommissioning is only temporary, maintain the correct storage conditions:

Storage temperature: -10 to +50 °C

Air humidity: < 92 % relative humidity

Disposal

WARNING

Spring under tension!

Take particular care when disassembling the pump as the return spring (Item 5, Chapter 2.2) is under considerable mechanical tension!

IMPORTANT

Observe your locally applicable regulations (particularly with regard to electronic scrap and gear oil)!

11 Spare parts and accessories

CAUTION

The assembly and installation of ProMinent® metering pumps with other-make parts that are not tested and recommended by ProMinent are not permitted and can lead to personal injury and damage to property for which no liability shall be accepted!

Spare parts
You will find the order numbers for the wearing parts in the exploded view drawings in the annex. If you require further parts, please order the “Spare parts list ProMinent® Sigma/ 2”.

Actuator for automatic stroke adjustment, setting time approx. 1 sec for 1% stroke length, feedback potentiometer 1k Ohm enclosure rating IP 54.

Adjuster comprising actuator and incorporating servo controller for stroke length adjustment via standard signal. Standard signal input 0/4-20 mA, corresponds to stroke length 0 – 100 %. Manual to automatic mode switch, switch for stroke length adjustment in manual mode, mechanical position display of 0/4-20 mA actual stroke length value output for remote display.

Variable speed motors with integrated speed changer (Identcode characteristic V)
Power supply 1 ph 230 V, 50/60 Hz, 0.37 kW
Optional external control via 0/4-20 mA

Speed controllers in metal casing (Identcode characteristic Z)
The speed controller kit comprises a speed changer and a 0.37 kW variable speed motor.

Float switches
2-stage, with 2 m connection cable

Alarm relays
For signalling faults

Alarm and pacing relays
For cyclic timing of other devices and for signalling faults.

Control cables
Universal control cable 5-core/2.5 and 10 m
External contact cable 2-core/2.5 and 10 m

Foot valves
With intake filter and non-return ball for connection at end of intake line.

Metering valves
With spring-loaded non-return ball for metering in open or closed systems and for mounting the metering line.

Backpressure valves
For exact metering at low operating pressure or as overflow safety valve.

Accumulators
For pulsation damping in long metering lines.

Metering monitors
For monitoring metering operations. After an adjustable number of non-acknowledged metering strokes, a fault is indicated and the metering pump shut down.

Intake assemblies
With foot valve and float switch for expendable packing drums or metering tanks.

Metering tanks
From 35 to 1000 l capacity with lockable screw cover and necessary accessories.

Manual/electric stirrers
For mixing and preparing metering solutions.

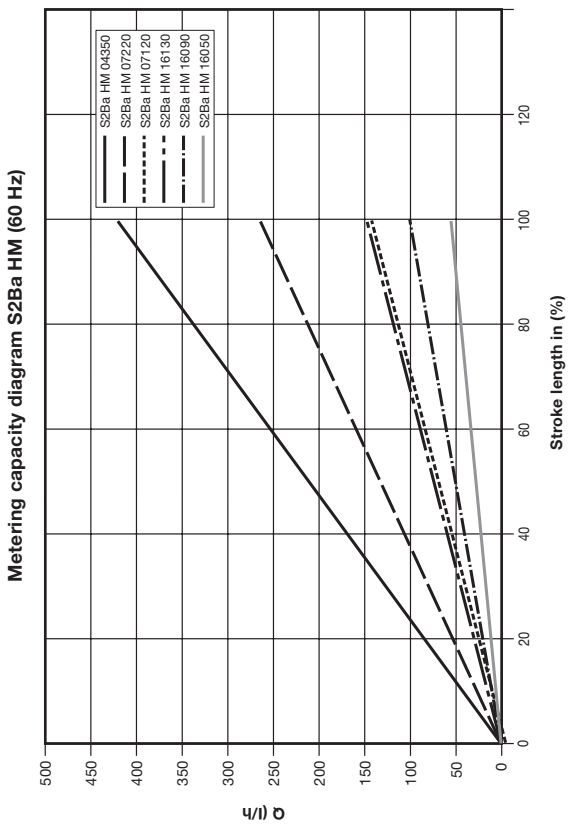
Metering capacity diagram S2Ba HM (60 Hz)
Q (l/h
Stroke length in (%)
S2Ba HM 04350
S2Ba HM 07220
S2Ba HM 07120
S2Ba HM 16130
S2Ba HM 16090
S2Ba HM 16050

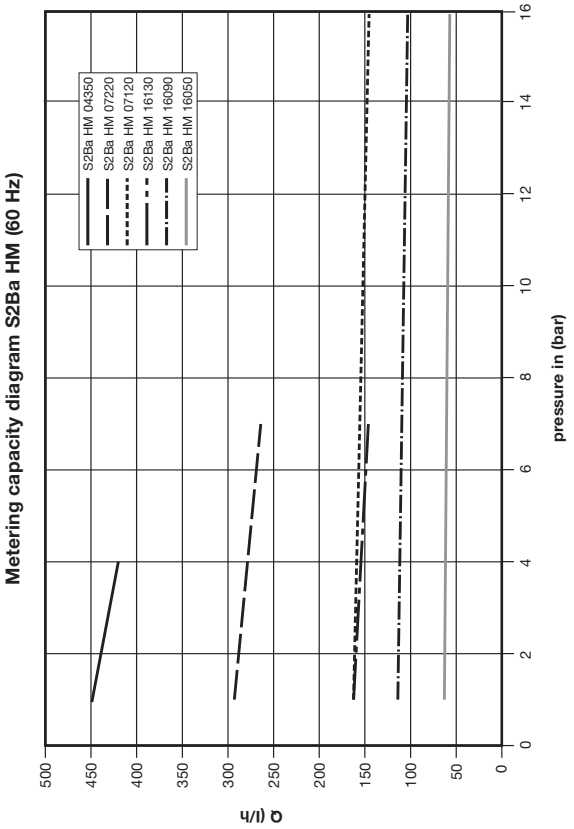
Metering capacity diagram S2Ba HM (60 Hz)
Q (l/h
pressure in (bar)
S2Ba HM 04350
S2Ba HM 07220
S2Ba HM 07120
S2Ba HM 16130
S2Ba HM 16090
S2Ba HM 16050

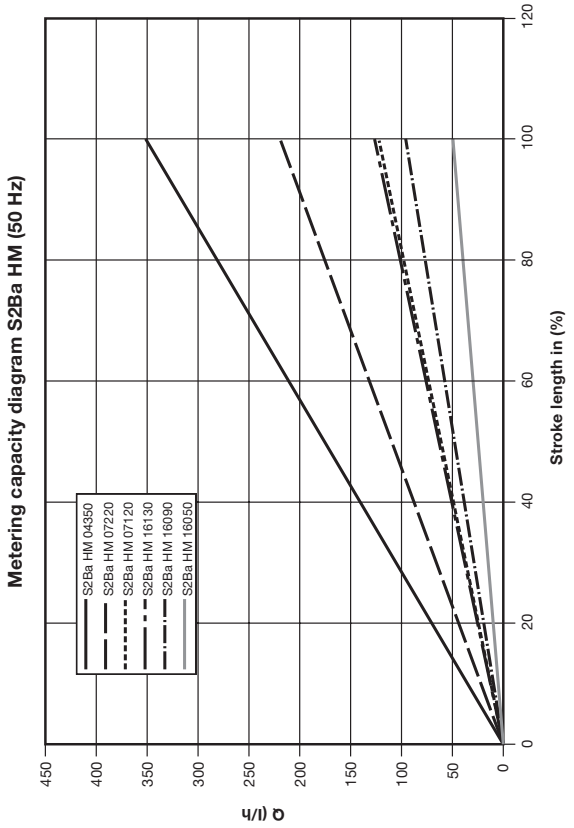
Metering capacity diagram S2Ba HM (50 Hz)
Q (l/h
Stroke length in (%)
S2Ba HM 04350
S2Ba HM 07220
S2Ba HM 07120
S2Ba HM 16130
S2Ba HM 16090
S2Ba HM 16050

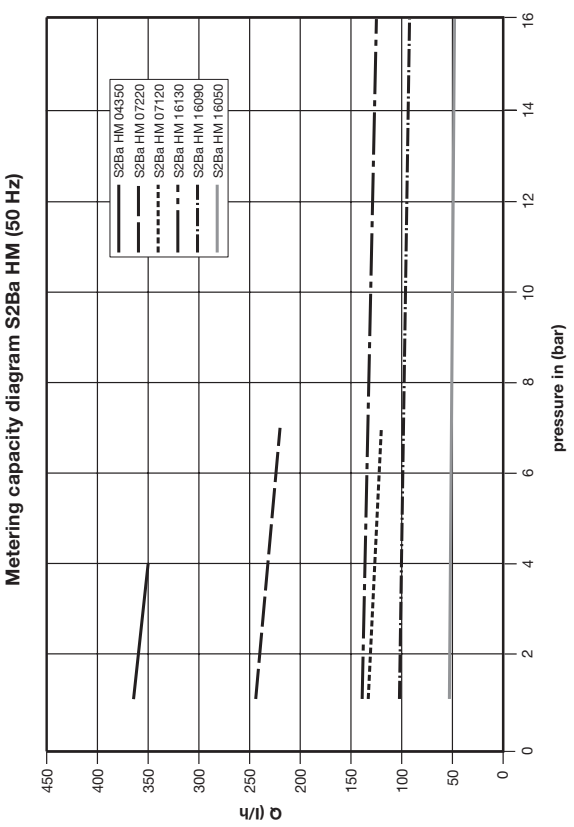
Metering capacity diagram S2Ba HM (50 Hz)
Q (l/h
pressure in (bar)
S2Ba HM 04350
S2Ba HM 07220
S2Ba HM 07120
S2Ba HM 16130
S2Ba HM 16090
S2Ba HM 16050

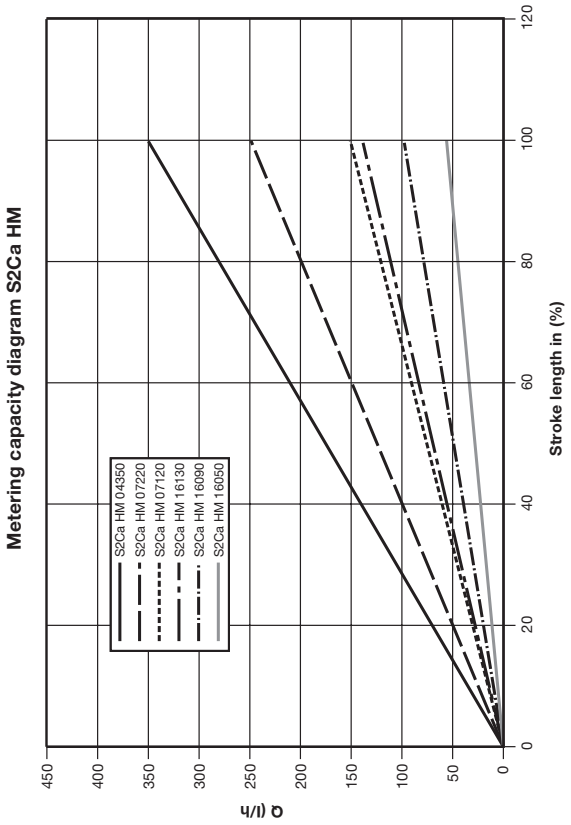
Metering capacity diagram S2Ca HM
Q (l/h
Stroke length in (%)
S2Ca HM 04350
S2Ca HM 07220
S2Ca HM 07120
S2Ca HM 16130
S2Ca HM 16090
S2Ca HM 16050
450
400
350
300
250
200
150
100
50
0
120
100
80
60
40
20
0

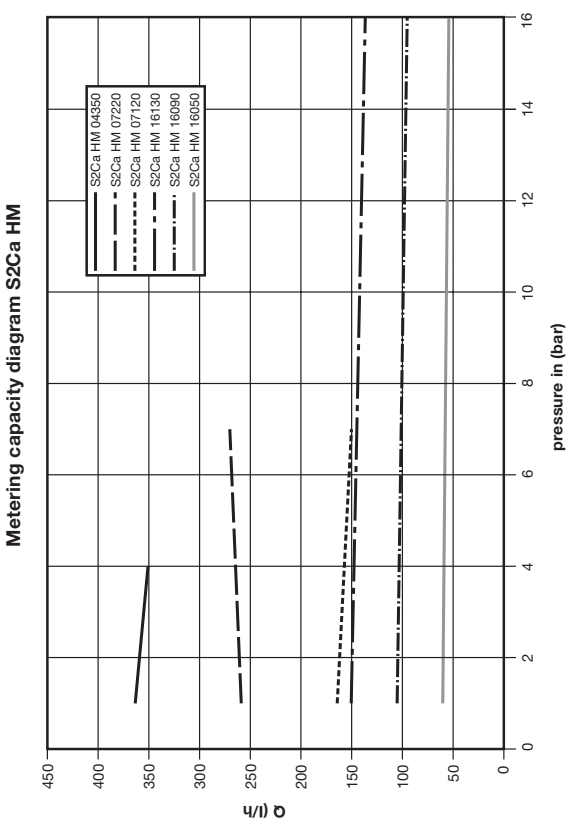
Metering capacity diagram S2Ca HM
Q (l/h
pressure in (bar)
S2Ca HM 04350
S2Ca HM 07220
S2Ca HM 07120
S2Ca HM 16130
S2Ca HM 16090
S2Ca HM 16050
450
400
350
300
250
200
150
100
50
0
16
14
12
10
8
6
4
2
0

Motor Datenblatt / Motor data sheet / Fiche technique pour moteur

Bestell Nr. **order no. / no. de commade**	**1011036**	**Hersteller** **producer / producteur**	**ATB**

Motor- Typ motor type type du moteur	AF 63/4C-7	**Leistungsfaktor** power factor facteur de puissance	0.66	
Maschinenart type of machine désignation	3-Ph. Motor	**Wirkungsgrad** efficiency rendement	81%	
Schutzart degree of protection degré de protection	IP55	**Bemessungsfrequenz** rated frequency fréquence nominale	50 Hz/ 60 Hz	
Bauform mounting construction	IMB5	**Bemessungsdrehzahl** rated speed vitesse nominale	1370	U/min rpm t/mn
Bemessungsleistung rated output puissance nominale	0.25 kW	**Wärmeklasse** temperature class class d'isolement	F	
Bemessungsspannung rated voltage tension nominale	⅄ / Δ 400/230 V	**Anzugsstrom** starting current courant de démarrage	3,2	fach fold fois
Bemessungsstrom rated current courant nominale	0,94/1,62 (50 Hz) 0,82/1,42 (60 Hz)	**Anzugsmoment** starting torque couple de démarrage	2,1	fach fold fois
Geprüft nach tested in acc. with contrôlé selon	DIN EN 60034	**Kippmoment** pull-out torque couple de décrochage	2,3	fach fold fois
PTB Nr.	ohne EX-Schutz	**Umgebungstemperatur** ambient temperature température ambiante	max 40 °C	
Ex-Schutzklasse ex-protective system		**Schaltung** connection branchement	⅄ / Δ	

Anmerkung comments observation	400/230 V 380-420/220-240 V (50Hz) 380-460/220-265 V (60Hz)

ProMinent

Pumpentyp S2Ba _ _ _ _ _ _ _ _ S _ _ _
S2Ca _ _ _ _ _ _ _ _ U _ _ _ _ _ _

Die Daten entsprechen den Angaben der Motorenhersteller. Kenndaten funktionsgleicher Motoren anderer Hersteller ändern sich nur unwesentlich. Angaben ohne Gewähr. The data correspond to the details given by the motor manufacturers. Ratings of motors with the same functions made by other producers show insignificant changes only. This information is supplied without liability. Les données techniques correspondent au descriptif du fabricant des moteurs. Les données techniques des moteurs similaires chez d' autres fabricants varient très peu. Données sont d' ordre général.

ProMinent Dosiertechnik GmbH . 69123 Heidelberg . Germany Nr./No. MD-1011036 Datum/Date 03.06.05

For pumps without Ex protection:

EC Declaration of Conformity

We hereby declare,

ProMinent Dosiertechnik GmbH
Im Schuhmachergewann 5 - 11
D - 69123 Heidelberg

that the following designated product complies with the pertinent fundamental safety and health requirements of the EC Directive in terms of its design and construction and in terms of the version marketed by us. This declaration loses its validity in the event of a modification to the product not agreed with us.

Description of the product:	***Metering pump, Series Sigma***
Product type:	***S2Ba... / S2Ca...***
Serial no.:	***refer to nameplate on the device***
Pertinent EC Directives:	***EC Machinery Directive (2006/42/EC)*** ***EC Low Voltage Directive (2006/95/EC)*** ***EC EMC Directive (2004/108/EC)***
Applied harmonised standards in particular:	***EN ISO 12100-1, EN ISO 12100-2, EN 809,*** ***EN 60335-1, EN 60335-2-41, EN 60529,*** ***EN 61000-3-2, EN 61000-6-2***
technical documents have been compiled by:	***Norbert Berger*** ***Im Schuhmachergewann 5-11*** ***DE-69123 Heidelberg***
Date / Manufacturer - Signature :	*04.01.2010*
Details of the signatory:	*Joachim Schall, Head of Research and Development*

For pumps with Ex protection:

- Original -
EC - Declaration of Conformity

We hereby declare,

ProMinent Dosiertechnik GmbH
Im Schuhmachergewann 5 - 11
D - 69123 Heidelberg

That the following designated product, based on its development and construction, as well as the version marketed by us, complies with the relevant EC safety and health directive.
This declaration loses its validity in the event of a modification to the product not agreed with us.

Identification of Product :	Diaphragm Metering Pump, Series Sigma 2, Construction "Ex-Proof" according to "ATEX 95"
Product Type:	S2BA- - - - - - - - - - - - - - XY- - characteristic value "X" = "P" or "L" and characteristic value "Y" = "1" or "2 or "X" = "1, 2, 3, 4 or 5" and "Y" = "A"
Series - No. :	see nameplate on device
Relevant EC Directives:	EC - Machine Directive (2006/42/EC) EC - EMV - Directive (2004/108/EC) EC - Ex- Directive (94/9/EC)
Applied harmonised standards in particular: Pump without Motor:	EN ISO 12100-1/2, EN 809, EN 13463-1/5
Motor Ex "e":	EN 50014, EN 50019
Motor Ex "d":	EN 60079-0, EN 60079-1, EN 60079-7, EN 61241-0, EN 61241-1
Hub sensor:	EN 60079-0, EN 60079-11, EN 60079-26

The assembly of the components does not present any new Ex-relevant hazards

Ex-identification:	
Pump without motor:	II 2G c IIC T4 X
Motor (characteristic value "Y"="1") :	II 2G EEx e IIC T3
Motor (characteristic value "Y"="2") :	II 2G Ex de IIC T4
Diaphram rupture sensor	II 1G Ex ia IIC T6
Overall system:	II 2G c IIC T3 X (for "Y" ="1") or II 2G c IIC T4 X (for "Y" ="2" or "A")

Technical documents compiled by:	Norbert Berger Im Schuhmachergewann 5-11 DE-69123 Heidelberg
Date / Manufacturer - Signature :	26.05.2010
Details of the signatory	Joachim Schall, Head of Development

The EC conformity declarations, the EC series prototype test reports and the operating manuals for the individual components are also supplied with the pump.

Delivery unit Sigma/ 2 350-DN 25 PVT for identity code types: S2Ba/S2Ca 04350, 07120, 07220
Delivery unit Sigma/ 2 130-DN 15 PVT for identity code types: S2Ba/S2Ca 16050, 16090, 16130

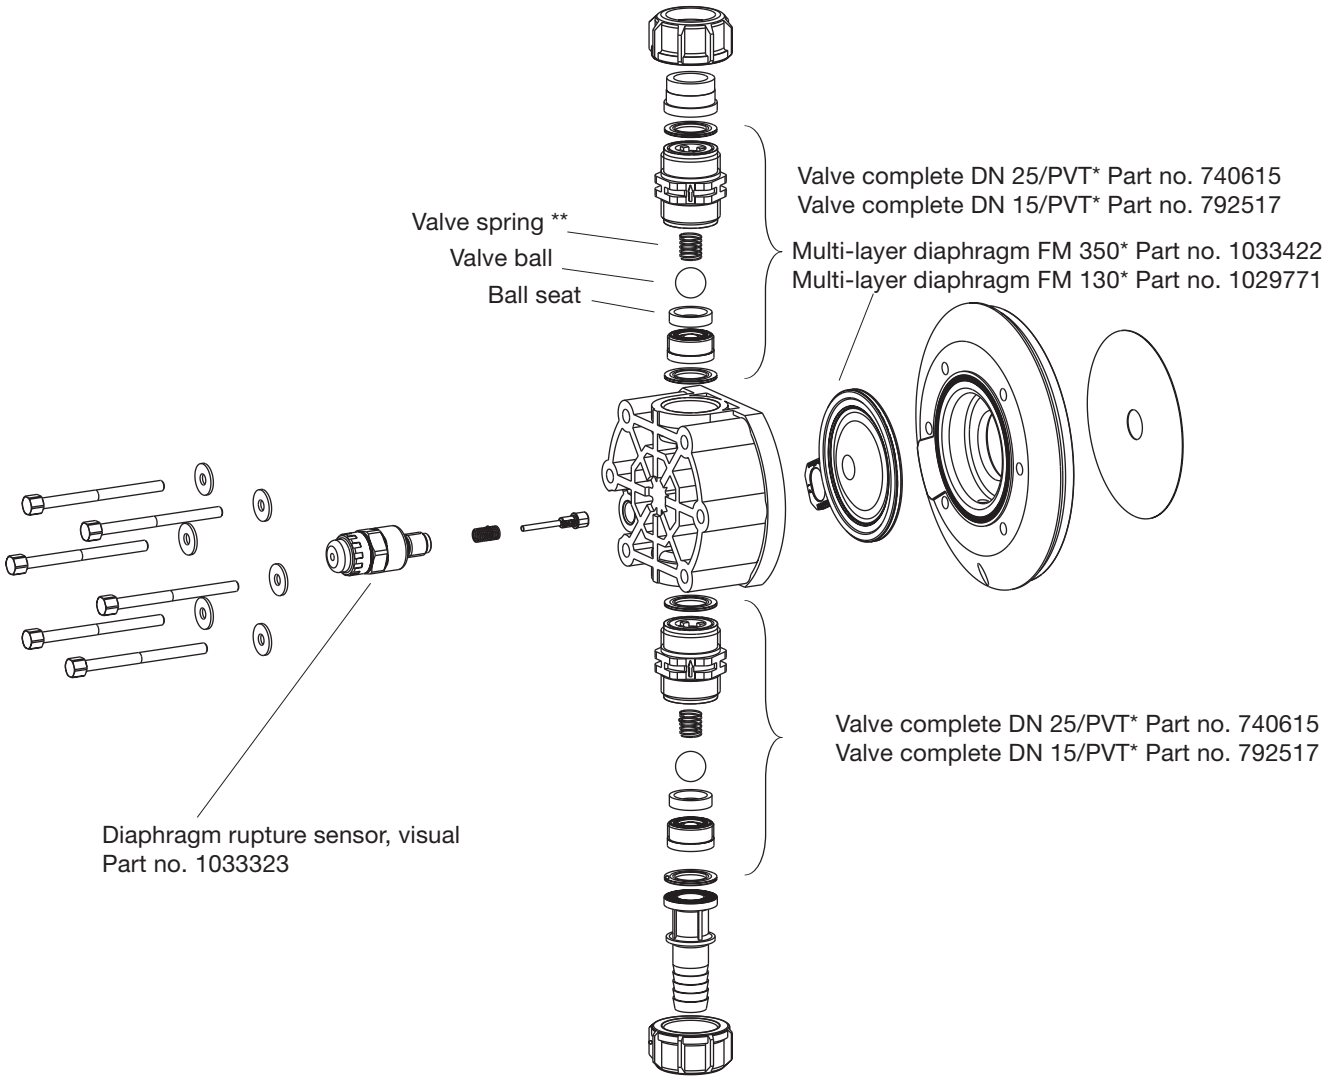
Valve complete DN 25/PVT* Part no. 740615
Valve complete DN 15/PVT* Part no. 792517
Valve spring **
Valve ball
Ball seat
Multi-layer diaphragm FM 350* Part no. 1033422
Multi-layer diaphragm FM 130* Part no. 1029771
Valve complete DN 25/PVT* Part no. 740615
Valve complete DN 15/PVT* Part no. 792517
Diaphragm rupture sensor, visual
Part no. 1033323

Spare parts kit FM 350 PVT Part no. 1035953
Spare parts kit FM 130 PVT Part no. 1035951

* The listed items are constituent parts of the spare part kit.

** Special accessories (not included in spare part kit).
Subject to technical modifications.

Fig. 28
61_05-104_01_38-03x01

Delivery unit Sigma/ 2 350-DN 25 SST for identity code types: S2Ba/S2Ca 04350, 07120, 07220
Delivery unit Sigma/ 2 130-DN 15 SST for identity code types: S2Ba/S2Ca 16050, 16090, 16130

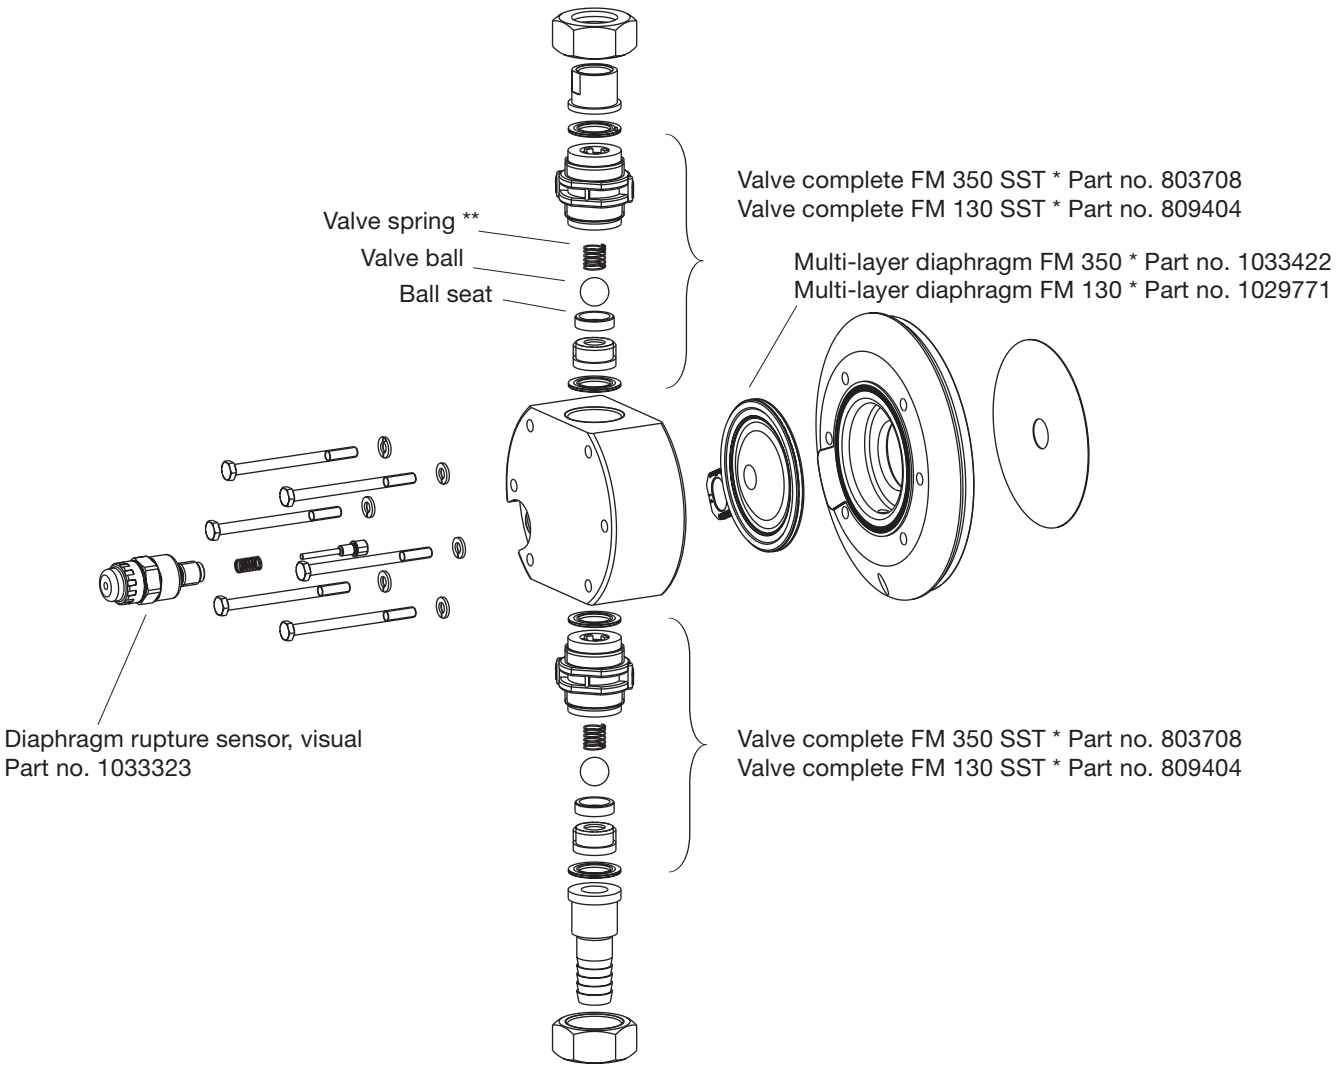
Valve complete FM 350 SST * Part no. 803708
Valve complete FM 130 SST * Part no. 809404
Valve spring **
Valve ball
Ball seat
Multi-layer diaphragm FM 350 * Part no. 1033422
Multi-layer diaphragm FM 130 * Part no. 1029771
Diaphragm rupture sensor, visual
Part no. 1033323
Valve complete FM 350 SST * Part no. 803708
Valve complete FM 130 SST * Part no. 809404

Spare parts kit FM 350 SST without valve	Part no. 1035960
Spare parts kit FM 350 SST with 2 valves	Part no. 1035959
Spare parts kit FM 130 SST without valve	Part no. 1035957
Spare parts kit FM 130 SST with 2 valves	Part no. 1035954

* The listed items are constituent parts of the spare part kit.

** Special accessories (not included in spare part kit).
Subject to technical modifications.

Fig. 29
61_05-104_01_41-03x01

Delivery unit Sigma/ 2 350-DN 25 PVT for identity code types: S2Ba/S2Ca 04350, 07120, 07220
Delivery unit Sigma/ 2 130-DN 15 PVT for identity code types: S2Ba/S2Ca 16050, 16090, 16130

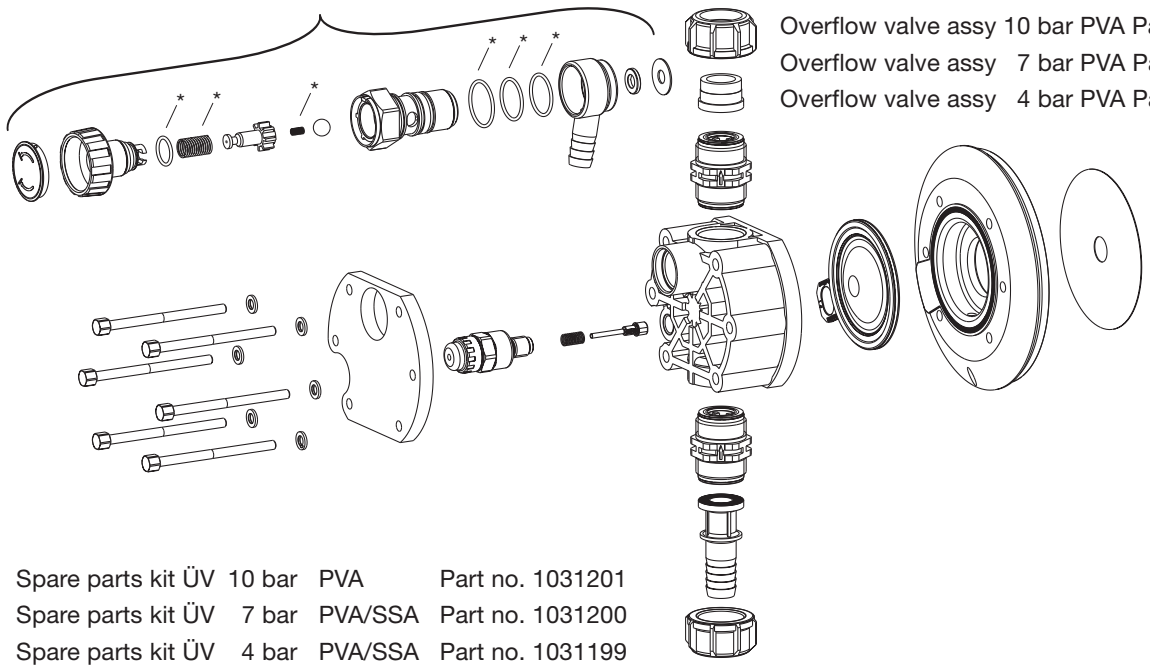

Overflow valve assy 10 bar PVA Part no. 1018947
Overflow valve assy 7 bar PVA Part no. 740811
Overflow valve assy 4 bar PVA Part no. 740812

Spare parts kit ÜV 10 bar PVA Part no. 1031201
Spare parts kit ÜV 7 bar PVA/SSA Part no. 1031200
Spare parts kit ÜV 4 bar PVA/SSA Part no. 1031199

Andere Ersatzteile siehe Fördereinheit ohne Überströmventil (siehe S. 61).

Subject to technical modifications.

Fig. 30
61_05-104_01_39-03x01

Delivery unit Sigma/ 2 350-DN 25 SST for identity code types: S2Ba/S2Ca 04350, 07120, 07220
Delivery unit Sigma/ 2 130-DN 15 SST for identity code types: S2Ba/S2Ca 16050, 16090, 16130

Overflow valve assy 16 bar SSA Part no. 1019246
Overflow valve assy 7 bar SSA Part no. 740815
Overflow valve assy 4 bar SSA Part no. 740814

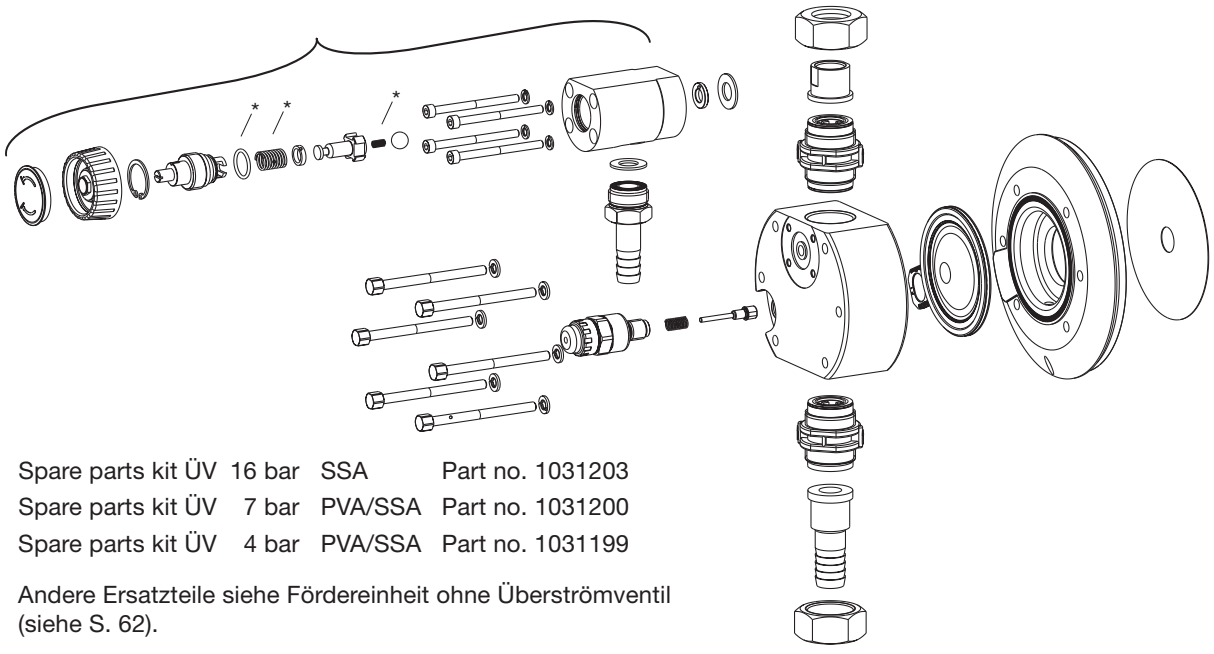

Spare parts kit ÜV 16 bar SSA Part no. 1031203
Spare parts kit ÜV 7 bar PVA/SSA Part no. 1031200
Spare parts kit ÜV 4 bar PVA/SSA Part no. 1031199

Andere Ersatzteile siehe Fördereinheit ohne Überströmventil (siehe S. 62).

Subject to technical modifications.

Fig. 31
61_05-104_01_42-03x01

* Die aufgeführte Positionen sind die Bestandteile des Ersatzteilsets.

Anschriften- und Liefernachweis durch den Hersteller /
Addresses and delivery through manufacturer /
Adresses et liste des fournisseurs fournies par le constructeur /
Para informarse de las direcciones de los distribuidores, dirigirse al fabricante:

ProMinent Dosiertechnik GmbH
Im Schuhmachergewann 5-11
69123 Heidelberg
Germany

Tel.: +49 6221 842-0
Fax: +49 6221 842-419

info@prominent.com
www.prominent.com